

Explore XE

User Manual



V1.0

===== CONTENT =====

CONTENT	1
SAFETY GUIDES.....	2
USE CHECK.....	4
PRODUCT HIGHLIGHTS	6
CAMERA SPEC.....	7
INTERFACE DESCRIPTION	9
CAMERA DIMENSION	10
INSTALLATION.....	11
IR REMOTE CONTROLLER.....	13
VISCA IN(RS232 PORT).....	15
VISCA PROTOCOL	17
PELCO-D PROTOCOL.....	<u>31</u>
PELCO-P PROTOCOL	32
OSD MENU.....	33
UVC CONTROL	37
WEB INTERFACE	38
VIEW RTSP VIDEO VIA VLC.....	46
NDI TOOLS.....	47
VISCA OVER IP	49

===== SAFETY GUIDES =====

- Before operation, please fully read and follow all instructions in the manual. For your safety, always keep this manual with the camera.
- The camera power voltage is 12V DC, rated current is 5A. We suggest you use it with the original power supply adapter supplied by the factory.
- Please keep the power cable, video cable and control cable in a safe place. Protect all cables especially the connectors.
- Operational environment: 0°C~50°C, humidity less than 90%.
- To avoid any danger, please keep the camera away from the corrosive liquid.
- Avoid stress, vibration and damp during transportation, storage and installation.
- Do not remove the camera housing and cover. For any service, please contact authorized technicians.
- Video cable and control cable should be individually shielded, and cannot be substituted with other cables. Do not direct the camera lens towards strong light, such as the sun or the intensive light.
- Use a dry and soft cloth to clean the camera housing. Applied with neutral cleaning agent when there is need to clean. To avoid damage on the camera lens, never use strong or abrasive cleaning agents on the camera housing.
- Do not move the camera by holding the camera head. To avoid mechanical trouble, do not rotate the camera head by hand.
- Put the camera on fixed and smooth desk or platform, avoid leaned installation.


===== SAFETY GUIDES =====

- Power Supply Polarity:



Attention!

▲ The video quality may be affected by the specific frequencies of electromagnetic field.

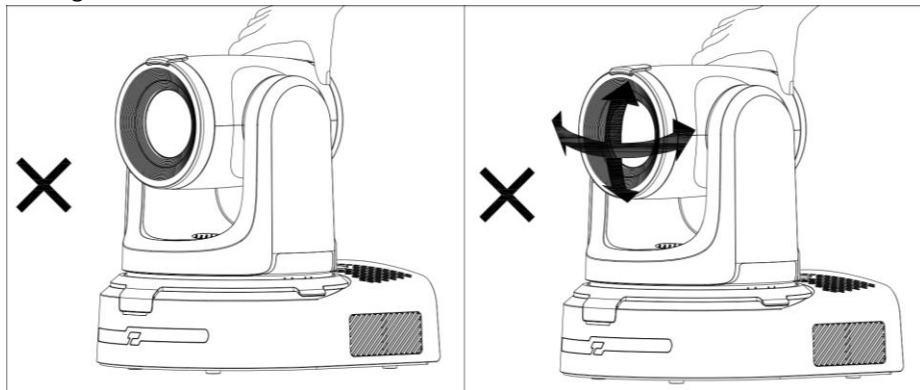

▲ Never grasp the head of the camera, and never move the camera by hand when it is working, otherwise, mechanism maybe destroyed.

Declaration:

■ Instructional Manual is for reference only. Please refer to the actual product.

■ Please contact Customer Service staff for the latest programs and supplementary documentations.

■ In case of any doubt or dispute in the instruction manual, the final interpretation of the company shall prevail.


===== USE CHECK =====

PACKING LIST

Check all below items when open the package

Camera	1PCS
Power Adapter	1PCS
Power Cable	1PCS
Remote Controller	1PCS
USB Type-C Cable	1PCS
RS232 Cable	1PCS
User Manual	1PCS
QC PASS	1PCS
Shock-absorbing Pad	1PCS

QUICK START

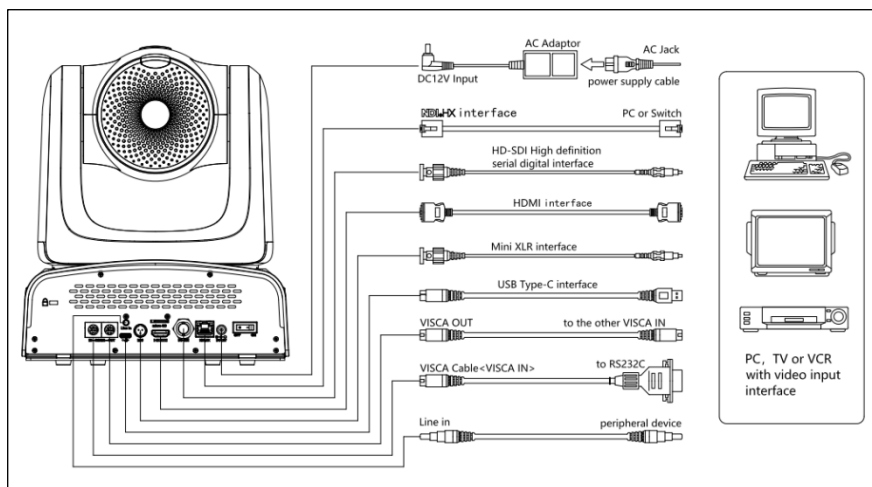


===== USE CHECK =====

Dial Switch Setting (at the bottom of the camera)

Dial Switches are used to control the functionalities of the camera. They should be in their working mode in normal conditions. Undefined modes should not be used by users without guidance of service person.

The dial switches are at the bottom of the camera.

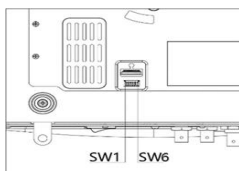

Usually, firmware are upgraded via Web UI. The above upgrade modes are used in case of web upgrade failure and can't be restored. Please refer to their specific instruction guide.

Bottom DIP Switches (ARM)

SW-1	SW-2	Description
OFF	OFF	ARM Upgrade Mode
ON	OFF	Reserved
OFF	ON	Reserved
ON	ON	Normal Operation Mode

Bottom DIP Switches

SW-3	SW-4	Description
OFF	OFF	Reserved
ON	OFF	Reserved
OFF	ON	Reserved
ON	ON	Normal Operation Mode

===== USE CHECK =====

Bottom DIP Switches

SW-5	SW-6	Description
OFF	OFF	Normal Operation Mode
ON	OFF	Reserved
OFF	ON	ISP Upgrade Mode
ON	ON	Reserved

== INTERFACE DESCRIPTION ==

★ Adopting the most advanced image processing DSP, Sony 1 inch 9MP sensor.

★ 4K wide angle optical lens: 20x optical zoom, with 71.28 degree horizontal field of view.

★ Ultra HD 4K60 video output, while supporting H.264, H.265 encoding.

★ Support POE++: one single ethernet cable to get video, control, and power supply.

★ Fast video format switch.

★ Fast and Accurate Focusing Algorithm: PDAF(Phase Detection Auto Focus).

★ Unique camera design with patent.

★ Support field upgrade, one-click software upgrade through WebUI.

★ Offers diverse output options, including 4K60p resolution through NDIHX3 and HDMI connections.

★ Support 3.5mm line-in input and a Mini XLR audio input (phantom power).

★ Standard VISCA, PELCO-D, PELCO-D control protocol, quickly set up through OSD menu.

★ Support AI based Auto-Tracking with smooth lens movement.

★ Support Free D protocol for integrating with VR/AR systems.

★ Featuring two specialized MicroSD card slots, one exclusively for firmware updates and the other designed for local recording.

★ Supplied with multi-functional IR remote controller, can set IP address via OSD menu.

★ Standard Sony VISCA over IP protocol, support network video and control transmission simultaneously.

★ Support SRT protocol for secure transmission of high-quality, low-latency video over WANs.

★ Support RTMP protocol directly streaming to YouTube Live, Facebook Live and other platform.

★ Support ND Filter and IR Cutter.

★ Multi language menu: support Chinese, English, Korean, Spanish and Russian.

== INTERFACE DESCRIPTION ==

Camera	Explore XE
Part NO.	TLC-900-IP-20-4K(NDI)-AB-XE
Sensor	Sony 1inch 9MP UHD CMOS sensor
Zoom	20X optical zoom
Lens	f = 9.79 ~ 186.5mm, F2.8 ~ F4.5
Horizontal View Angle	71° (Wide) ~ 4.05° (Tele)
Vertical viewing angle	39.6° ~ 2.2°
Diagonal viewing angle	78.5° ~ 4.6°
Minimum Working Distance	Wide: 15cm; Tele: 150cm
S/N Ratio	≥ 50dB
Video Format	3G-SDI: 1920*1080P60/59.94/50/30/29.97/25/24/23.98; 1920*1080I60/59.94/50; 1280*720P60/59.94/50/30/29.97/25
	HDMI2.0: 3840*2160P60/50/30/25/59.94/29.97/24/23.98; 1920*1080P60/50/30/25/59.94/29.97/24/23.98; 1920*1080I60/50/59.94; 1280*720P60/50/30/25/59.94/29.97
	NDI@HX3: Main Stream: 3840*2160P15~60; 1920*1080P15~60; 1280*720P15~60; 1024*576P15~60 Sub Stream :640*360P15~30
	USB Type-C: NV12: 1920*1080P5; 1280*720P15; 1024*576P25; 800*448P30 YUYV: 1920*1080P5; 1280*720P15; 1024*576P25; 800*448P30 MJPG: 3840*2160P30; 1920*1080P60; 1280*720P60; 1024*576P60; 800*448P60 H264/H265: 3840*2160P30; 1920*1080P60; 1280*720P60; 1024*576P60; 800*448P60

== INTERFACE DESCRIPTION ==

Image Parameters

Noise Reduction	2D&3D
Minimum lux	0.5Lux (50 IRE Max AGC,1/30, F1.8)
White Balance	Auto/Manual/Auto tracking/Push/Indoor/Outdoor/Color Temperature
Exposure	Auto/Manual/Shutter Priority/Iris Priority/Brightness Priority
Anti-Flicker	OFF,50Hz,60Hz
Image Flip	Support
Mirroring	Support
Focus	Auto/Manual
Iris	Auto/Manual
Electronic-shutter	Auto/Manual
Gamma	Support
Backlight Compensation	Support

IP Streaming

Video Encoding	H.264/H.265
Bitrate Control	Variable bitrate(VBR), Constant bitrate(CBR)
Bitrate Range	1024Kbps~122800Kbps
Network Port Speed	1000M
Protocol	NDI®HX3, SRT, HTTP, HTTPS, RTSP, RTMP, RTMPS, ONVIF, VISCA over IP(TCP&UDP), VISCA, PELCO P/D, SSDP, FreeD, NTP, RTP Multicast, WebRTC, MPEG-TS


PTZ Parameters

Preset	Remote controller: 10; Serial port: 256; Accuracy: 0.1°
Pan Rotation Angle	-176° ~+176°
Tilt Rotation Angle	-90° ~+90°
Pan Rotation Speed	0.1°~80°/s

== INTERFACE DESCRIPTION ==


Tilt Rotation Speed	0.1°~60°/s
I/O Interface	
Control Port	RS232(RS485), NDI®HX3
Video Port	NDI® HX,HDMI2.0,3G-SDI,USB Type-C
Audio Port	Min XLR(with phantom power), stereo 3.5mm line in
Tally	Support
POE++	Support
Daisy Chain	Support
General	
Input Voltage	DC12V, POE++ (IEEE802.3bt)
Operating Temperature	-10°C ~ 50°C
Operating Humidity	≤80%
Dimension (L×W×H)	232.5mm×264mm×269mm
Net Weight	4.6KG(10.15LBS)
Color	Black/White

== INTERFACE DESCRIPTION ==

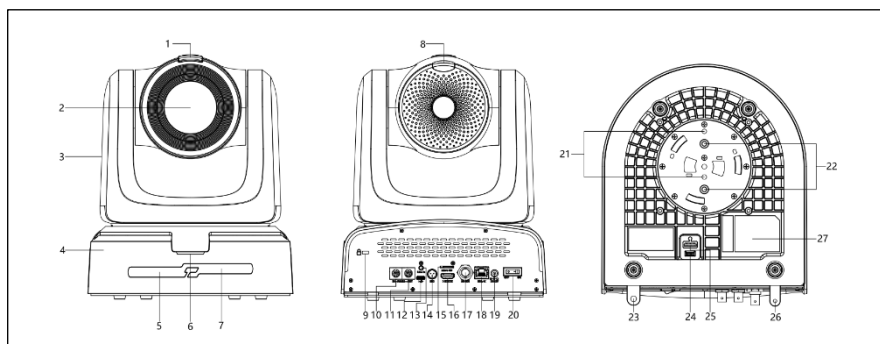

1. Front Indicator Light	12. USB-C	23. Safety Tether Lock Hole
2. Lens	13. Line-in	24. Bottom DIP Switch
3. Gimbal	14. XLR Audio Interface	25. Upgrade slot
4. Camera Base	15. MicroSD Card Slot	26. Mounting Hole
5. Front IR Receiver Panel	16. HDMI	
6. Power Indicator Light	17. 3G-SDI	
7. Rear IR Receiver Panel	18. RJ45 (NDI® HX)	
8. Rear Indicator Light	19. 12V Power Input	
9. Lock Hole	20. Power Switch	
10. RS232 IN	21. Tripod Positioning Hole	
11. RS232 OUT	22. Tripod Screw Socket	

===== CAMERA DIMENSION =====

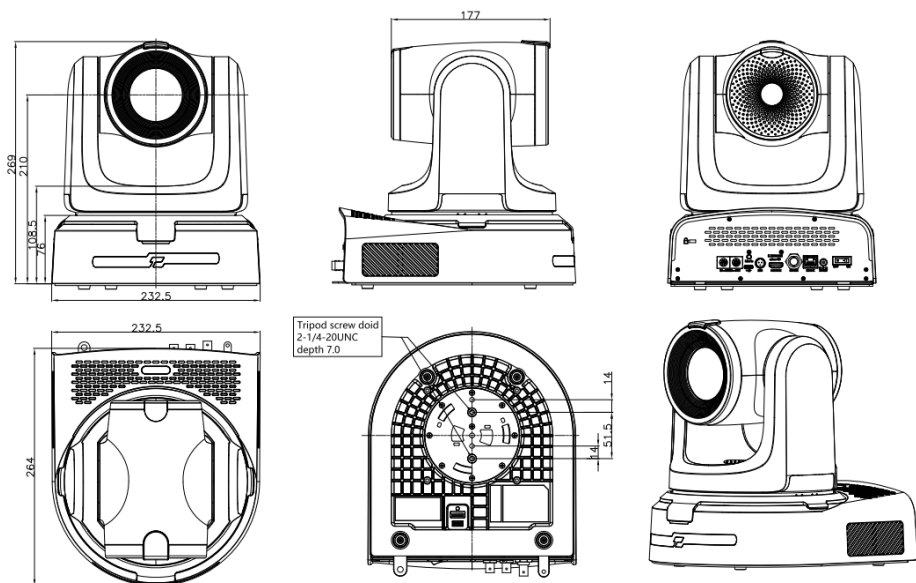





INSTALLATION



Wall-Mount Installation:

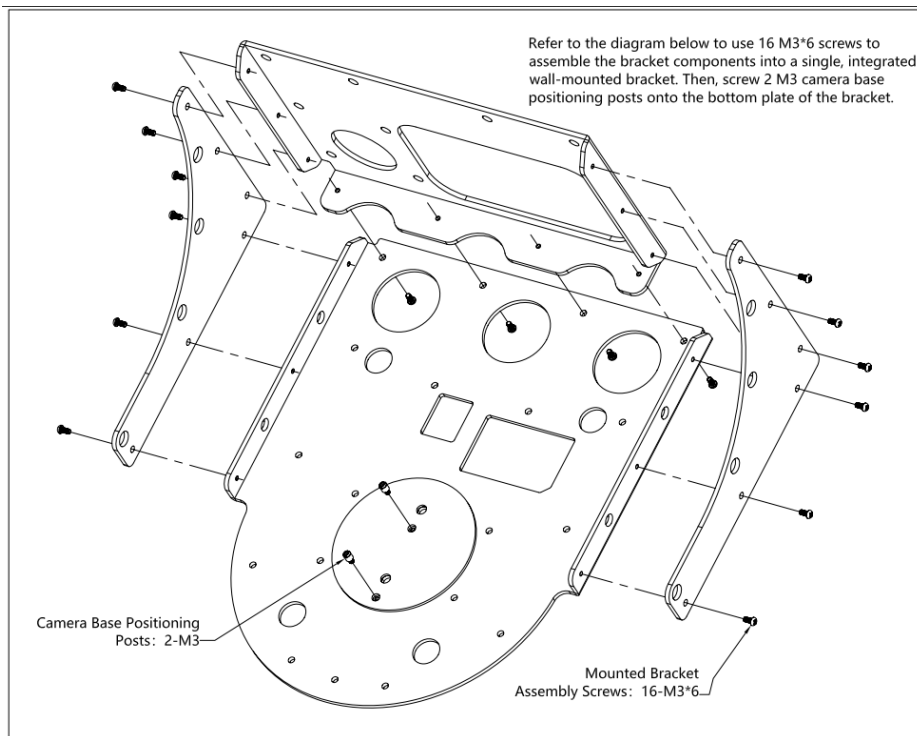


===== INSTALLATION =====

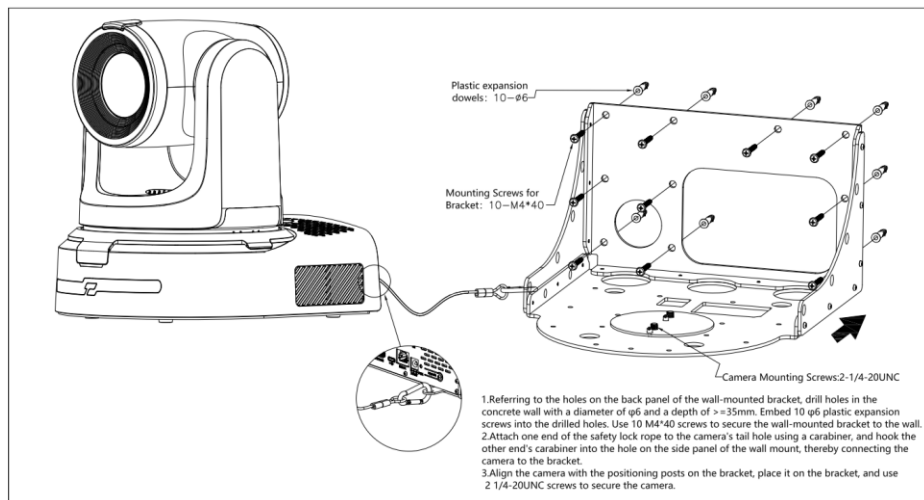

1. Referring to the holes on the back panel of the wall-mounted bracket, drill holes in the concrete wall with a diameter of $\phi 6$ and a depth of $\geq 35\text{mm}$. Embed 10 $\phi 6$ plastic expansion screws into the drilled holes. Use 10 M4*40 screws to secure the wall-mounted bracket to the wall.


2. Attach one end of the safety lock rope to the camera's tail hole using a carabiner, and hook the other end's carabiner into the hole on the side panel of the wall mount, thereby connecting the camera to the bracket.

3. Align the camera with the positioning posts on the bracket, place it on the bracket, and use 2 1/4-20UNC screws to secure the camera.

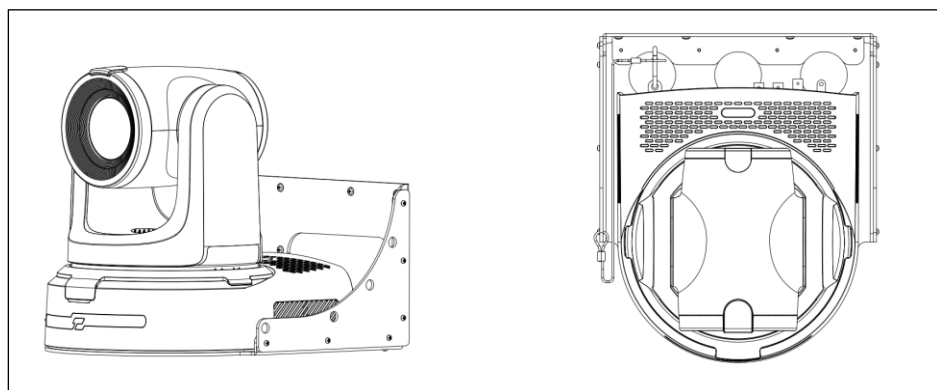

===== INSTALLATION =====

Ceiling-Mount Installation :

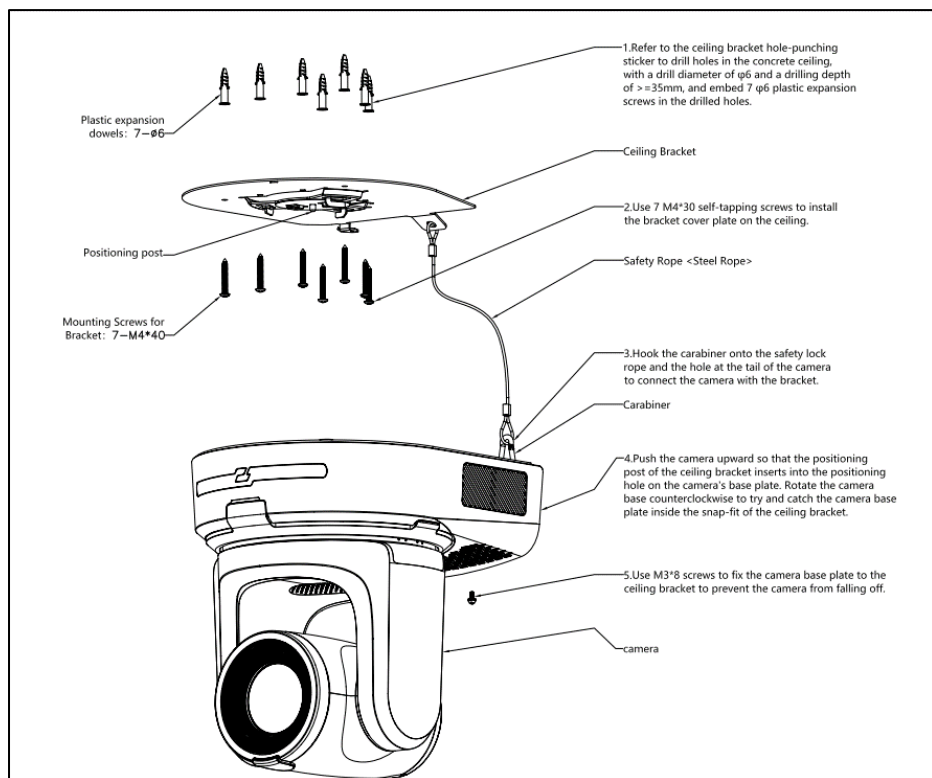

1. Refer to the ceiling bracket hole-punching sticker to drill holes in the concrete ceiling, with a drill diameter of $\phi 6$ and a drilling depth of $\geq 35\text{mm}$, and embed 7 $\phi 6$ plastic expansion screws in the drilled holes.


2. Use 7 M4*30 self-tapping screws to install the bracket cover plate on the ceiling.

3. Hook the carabiner onto the safety lock rope and the hole at the tail of the camera to connect the camera with the bracket.



4. Push the camera upward so that the positioning post of the ceiling bracket inserts into the positioning hole on the camera's base plate. Rotate the camera base counterclockwise to try and catch the camera base plate inside the snap-fit of the ceiling bracket.

5. Use M3*8 screws to fix the camera base plate to the ceiling bracket to prevent the camera from falling off.



INSTALLATION

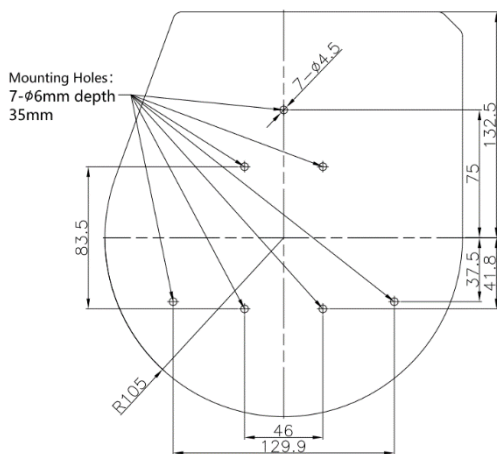


Ceiling bracket hole-punching sticker

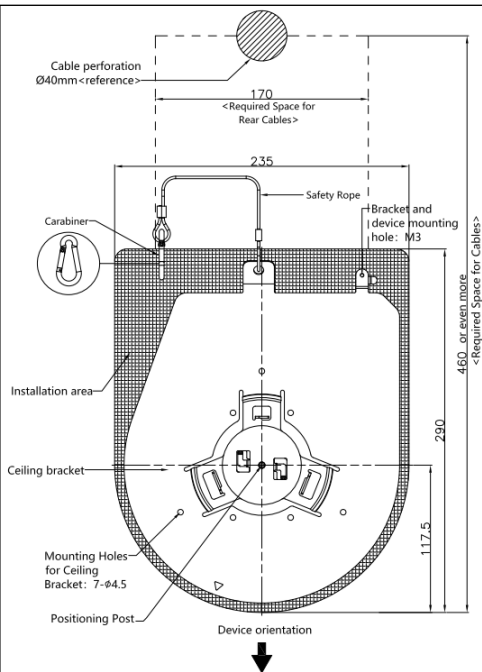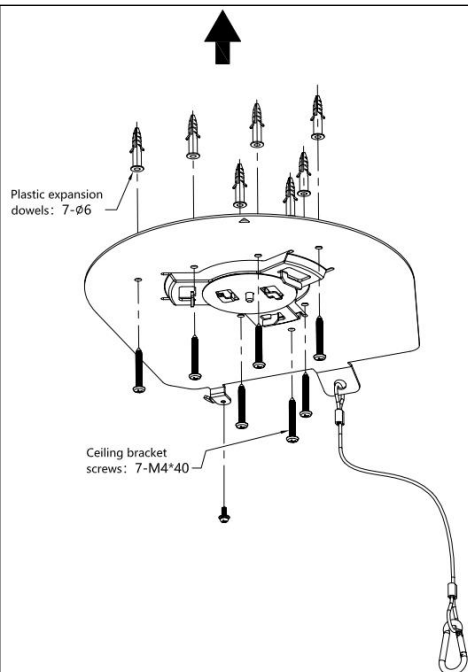


===== INSTALLATION =====

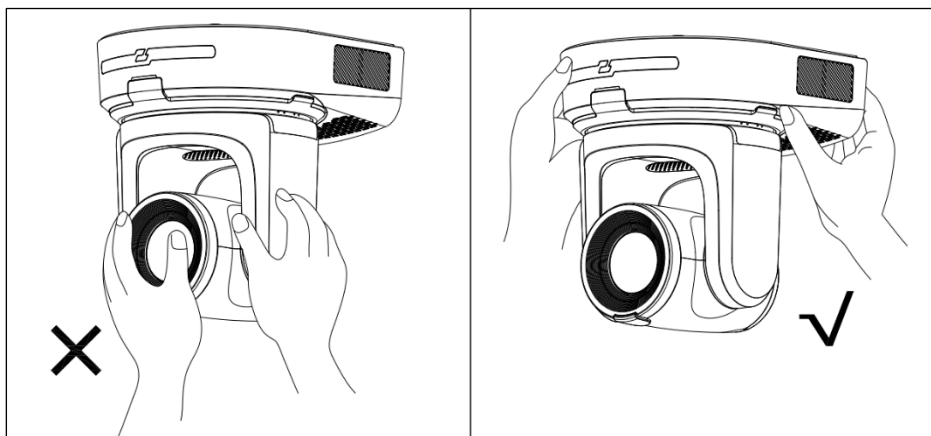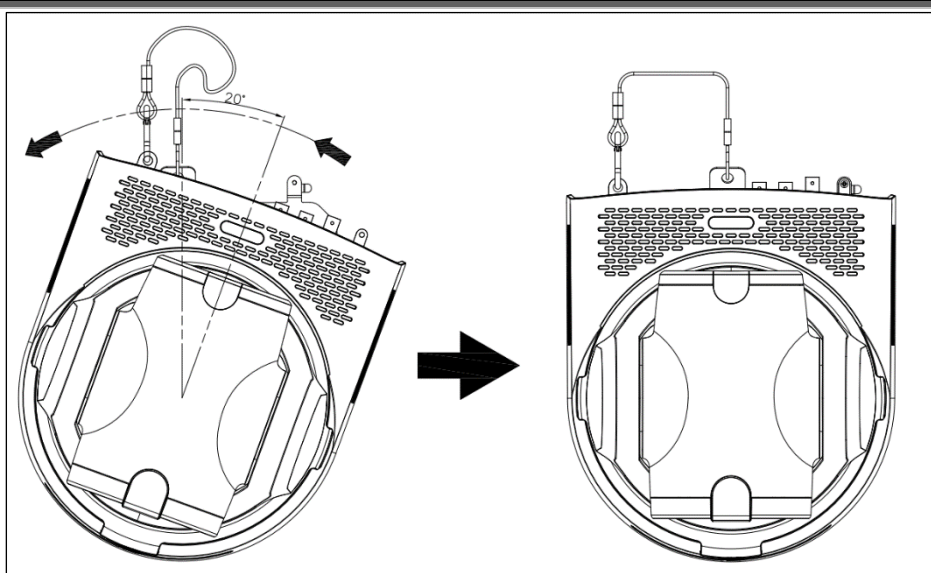

===== INSTALLATION =====

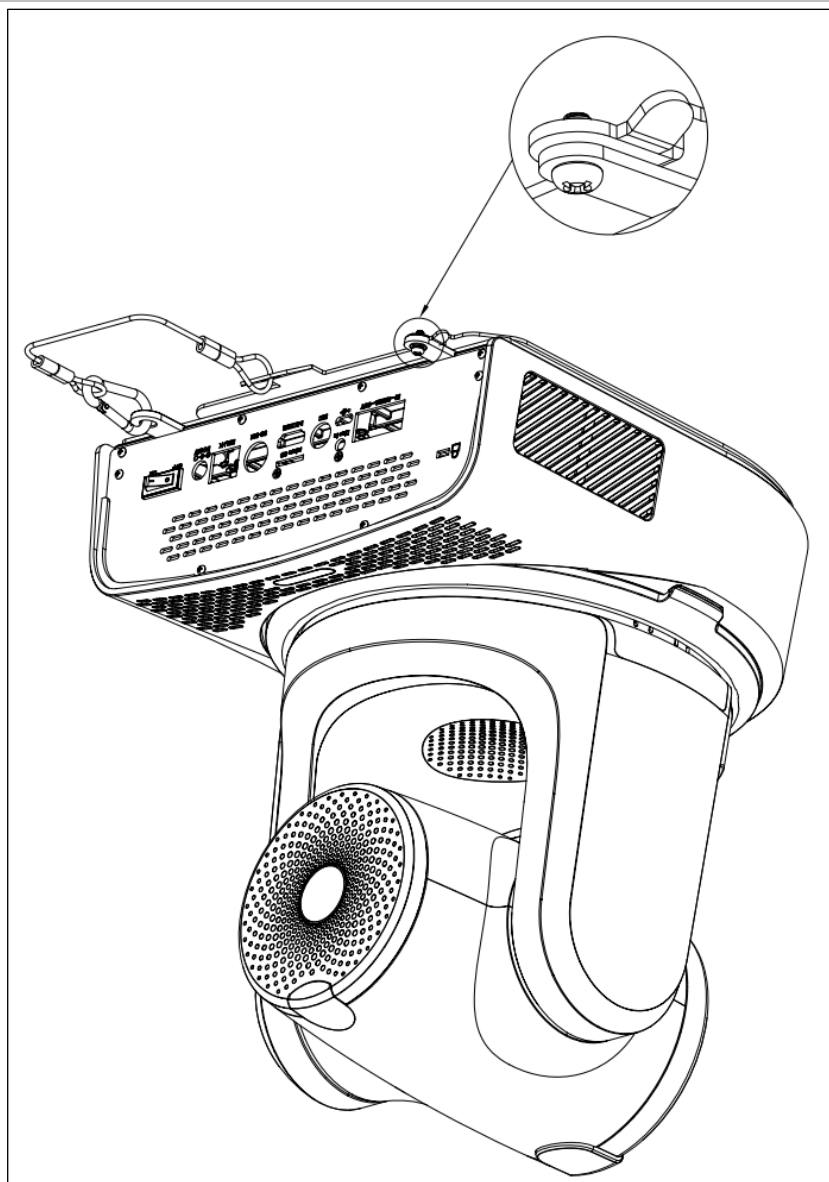

===== INSTALLATION =====

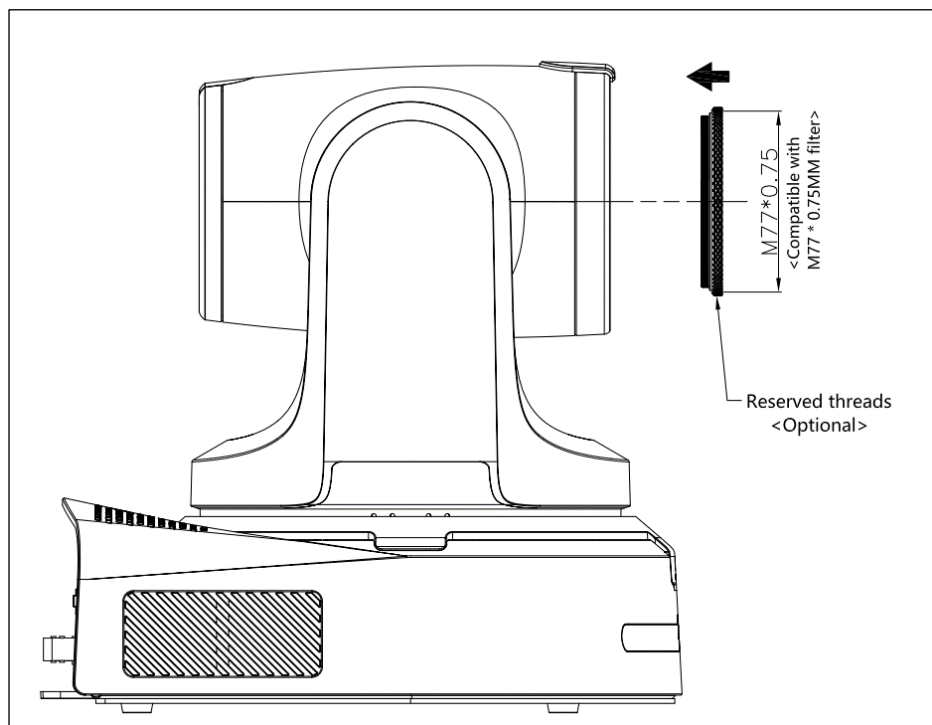



VISCA IN (RS232 PORT)



POWER

Short press POWER key to enter standby mode from normal working mode. Press it again, the camera will do self-checking, then go back to HOME position. It will go to preset 0 if preset 0 is set.

FREEZE

Short press FREEZE key to freeze/unfreeze the image.

IRT (IR Transfer/IR Pass)

Open/Close the IR pass function. Once press the IRT key, the camera will receive and pass the IR remote control signal to the codec/terminal.(via VISCA IN port)




Set 1 ~ Set 4 ADDRESS SETTING

Long press for 3 seconds until the key light ON, to set camera address.

CAM1 ~ CAM4 (CAMERA SELETING)

Short press to select the relative camera.

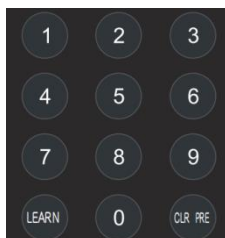

NUMBER KEY (1-9)

Set Preset: Long press the number key (3 seconds) to set preset.

Run Preset: Short press the number key to run preset.



VISCA IN (RS232 PORT)



CLR PRE (CLEAR PRESET)

CLR PRE+number key: to clear the relative preset.

Long press to clear all presets.

LEARN+LEARN+1: Set the upper left limit

LEARN+LEARN+2: Set blackboard area

LEARN+LEARN+3: Set the upper right limit

LEARN+LEARN+5: Set initial position

CLR PRE + CLR PRE +1: Clear left upper limit

CLR PRE + CLR PRE +2: Clear blackboard area

CLR PRE + CLR PRE +3: Clear the upper right limit

CLR PRE + CLR PRE +5: Clear initial position

F1 +1: Call the left upper limit position

F1 +2: Call blackboard area

F1 +3: Call the upper right position

F1 +5: Call the initial position

FOCUS KEY: +/-

Manual focus, only valid under manual focus mode.

ZOOM KEY: +/-

Set the Zoom rate.

NAVIGATE KEY: UP/DOWN/LEFT/RIGHT

Under working mode, use navigate key to set the pan tilt, and select menu when enter OSD.

OK/ HOME KEY: Under working mode, short press OK to make the camera go back to HOME position; and confirm the selection when enter OSD.



AF/MF: AUTO FOCUS/ MANUAL FOCUS

RESET: Press 3 seconds to reset camera.

MENU: Enter OSD menu under working mode. Use as Go-Back function after entering the menu.



F1: F1+OK: Aging mode (Factory debug use only).

F3: Short press: One-touch white balance. (You need to set the white balance mode in the menu to PUSH mode.)

F4: Reserved.





VISCA IN (RS232 PORT)




LIMIT L/ LIMIT R/ LIMIT CLR:

LEARN+LIMIT L: Set the pan tilt left limit position.


LEARN+LIMIT R: Set the pan tilt right limit position.

LEARN+LIMIT CLR: Clear the limit position.



AT CTL: To turn off/on the auto tracking.


AT MODE: Select auto tracking mode. (left/ middle/ right)




BRIGHT-/ BRIGHT+: Set image brightness, only valid under bright priority exposure mode.

VIDEO FORMAT KEYS:

Long press 3 seconds to select different video format output.



VISCA IN (RS232 PORT)

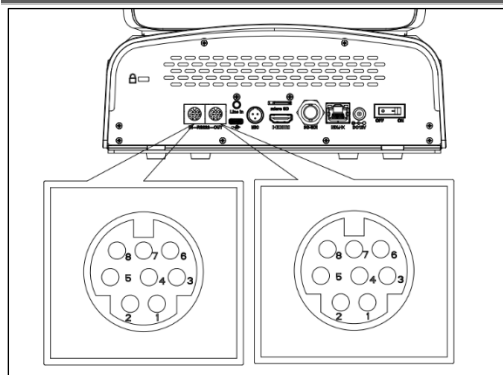

NO.	V_IN	V_OUT
1	DTR	DTR
2	DSR	DSR
3	TXD	TXD
4	GND	GND
5	RXD	RXD
6	A	
7	IR	
8	B	

V_IN	RS485
1	
2	
3	
4	
5	
6	A(+)
7	IR
8	B(-)

VISCA IN 与 Mini DIN

Camera VISCA IN		Mini DIN	
1	DTR	1	DSR
2	DSR	2	DTR
3	TXD	5	RXD
4	GND	4	GND
5	RXD	3	TXD
6	A(+)	6	NC
7	IR OUT	7	NC
8	B(-)	8	NC

VISCA IN 与 DB9 Connection


CameraVISCA IN		Windows DB-	
1	DTR	6	DSR
2	DSR	4	DTR
3	TXD	2	RXD
4	GND	5	GND
5	RXD	3	TXD
6	A(+)		
7	IR OUT		
8	B(-)		



VISCA IN (RS232 PORT)



VISCA Network Construction :

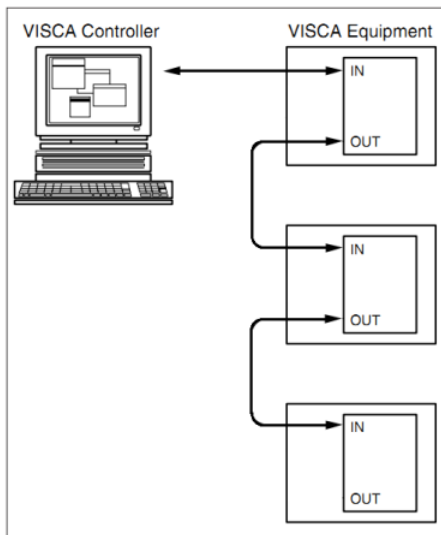

SERIAL PORT CONFIGURATION :

Parameter	Value
Baud rate	2400/4800/9600/11520
Start bit	1bit
Date bit	8bits
Stop bit	1bit
Check bit	None



VISCA PROTOCOL



Part1 Camera Return Command

Ack/Completion Message		
	command	Note
ACK	z0 41 FF	Returned when the command is accepted.
Completion	z0 51 FF	Returned when the command has been executed.

Error Messages		
	command	Note
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Not Executable	z0 61 41 FF	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

Part2 Camera Control Command

Command type	function	command	
Address Set	Broadcast	88 30 01 FF	Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
Command Cancel		8x 21 FF	
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
	Off	8x 01 04 00 03 FF	Address setting
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(Standar	8x 01 04 07 02 FF	
	Wide(Standar	8x 01 04 07 03 FF	
	Tele(Variable	8x 01 04 07 2p FF	p = 0(low)~7(high)
	Wide(Variabl	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position (0(wide) ~0x4000(tele))
	Direct with speed	8x 0A 04 47 0t 0p 0q 0r 0s FF	t: spd 0~7 pqrs: Zoom Position (0(wide) ~0x4000(tele))
CAM_DZoom	ON	8x 01 04 06 02 FF	
	OFF	8x 01 04 06 03 FF	
	Combine	8x 01 04 36 00 FF	Combine with optical
	Separate	8x 01 04 36 01 FF	Separate with optical
	Stop	8x 01 04 06 00 FF	Enable In separate
	Tele	8x 01 04 06 2p FF	Enable In separate
	Wide	8x 01 04 06 3p FF	Enable In separate



VISCA PROTOCOL



Command type	function	command	
	Direct	8x 01 04 46 0p 0q 0r 0s FF	Enable In separate
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far(Standard	8x 01 04 08 02 FF	
	Near(Standar	8x 01 04 08 03 FF	
	Far (Variable)	8x 01 04 08 2p FF	p=0 (Low) to 7 (High)
	Near	8x 01 04 08 3p FF	p=0 (Low) to 7 (High)
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs: Focus Position
	Auto Focus	8x 01 04 38 02 FF	
	Manual	8x 01 04 38 03 FF	
	One Push AF	8x 01 04 18 01 FF	
CAM_Zoom Focus	Direct	8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	pqrs: Zoom Position (0(wide)~ 0x4000(tele)) tuvw: Focus Position
CAM_WB	Auto	8x 01 04 35 00 FF	
	Indoor	8x 01 04 35 01 FF	
	Outdoor	8x 01 04 35 02 FF	
	One Push	8x 01 04 35 03 FF	
	ATW	8x 01 04 35 04 FF	
	Manual	8x 01 04 35 05 FF	
	One Push Trigger	8x 01 04 10 05 FF	
CAM_R Gain	Reset	8x 01 04 03 00 FF	Manual Control of R Gain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain (0~0xFF)
CAM_B Gain	Reset	8x 01 04 04 00 FF	Manual Control of B Gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain (0~0xFF)
CAM_AE	Full Auto	8x01 04 39 00 FF	Automatic Exposure
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure
	Iris Priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright Mode (Manual control)



VISCA PROTOCOL



Command type	function	command	
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position (0~0x15)
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting(0~0xD)
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris Position (0~0x11)
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting (0~0x0F)
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Positon (0~0x0E)
	GainLimit	8x 01 04 2C 0p FF	p:GainLimt 0x04~0x0F
CAM_AEBright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 4D 00 00 0p 0q FF	pq: Bright I Positon (0~0x1B)
CAM_ImageBright	Direct	8x 01 04 A4 00 00 0p 0q FF	pq: Image Bright Positon (0~0x0F) AE_AUTO/AE_SHUTTER /AE_IRIS
CAM_WDR	On	8x 01 04 3D 02 FF	Exposure Compensation ON/OFF
	Off	8x 01 04 3D 03 FF	
	Direct	8x 01 04 D3 pq FF	pq: ExpComp Position (0~0x6)
CAM_NDFilter	Direct	8x 01 04 DA 0p FF	p: ND Filter Level 0: 100% 1: 25% 2: 6.3% 3: 1.6%
CAM_Back Light(BLC)	On	8x 01 04 33 02 FF	BackLight On
	Off	8x 01 04 33 03 FF	BackLight Off
CAM_Sharpness	Reset	8x 01 04 02 00 FF	Aperture Control



VISCA PROTOCOL



Command type	function	command	
	Up	8x 01 04 02 02 FF	pq: Aperture Gain (0~0x0F)
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	
CAM_Memory(preset)	Reset	8x 01 04 3F 00 pp FF	pp: Preset Number(=0 to 127)
	Set	8x 01 04 3F 01 pp FF	
	Recall	8x 01 04 3F 02 pp FF	
CAM_MemoryH (preset)	Reset	8x 01 04 3F 00 0p 0p FF	pp: Preset Number(=0 to 255) Corresponds to 0 to 9 on the Remote Commander
	Set	8x 01 04 3F 01 0p 0p FF	
	Recall	8x 01 04 3F 02 0p 0p FF	
Freeze	Set	8x 01 04 75 0p FF	p: Freeze switch 3=OFF 2=ON
Preset Freeze Set	Set	8x 01 04 76 0p FF	p: Preset Freeze switch 3= OFF 2=ON
Preset Speed Set	Set	8x 01 7E 01 0B 00 qq FF	qq:Preset speed 2~24 default:15
Preset Speed Adj	adj	8x 01 7E 01 1B 0p FF	p: direction adjustment 3= down 2=up
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal ON/OFF
	Off	8x 01 04 61 03 FF	
CAM_Picture Flip	On	8x 01 04 66 02 FF	Image Flip Vertical ON/OFF
	Off	8x 01 04 66 03 FF	
CAM_RS485Ctl	On	8x 01 06 A5 02 FF	
	Off	8x 01 06 A5 03 FF	
CAM_Saturation	Saturation	8x 01 04 A1 00 00 0p 0q FF	pq:saturation level 0x00~0x0f
CAM_Contrast	Contrast	8x 01 04 A2 00 00 0p 0q FF	pq:Contrast level 0x00~0x0f
CAM_Speed By Zoom	On	8x 01 06 A0 02 FF	
	Off	8x 01 06 A0 03 FF	
CAM_PT Speed	PT Speed	8x 01 04 C1 00 00 0p 0q FF	pq:PT speed 0x05~0x18
CAM_Zoom Speed	Zoom Speed	8x 01 04 D1 00 00 0p 0q FF	pq:Zoom speed 0x01~0x07
CAM_Zoom Display	On	8x 01 06 C2 02 FF	
	Off	8x 01 06 C2 03 FF	
CAM_Freeze	Freeze	8x 01 04 75 0p FF	p: Freeze switch 3=OFF, 2=ON



VISCA PROTOCOL



Command type	function	command	
CAM_Preset Freeze Set	Preset Freeze Set	8x 01 04 76 0p FF	p: Preset Freeze switch 3=OFF, 2=ON
CAM_Preset PT Speed Set	Preset PT Speed Set	8x 01 7E 01 0B 00 qq FF	qq:Preset PT Speed 02~24 default:15
CAM_Preset Zoom Speed Set	Preset Zoom Speed Set	81 01 7E 01 2B 00 qq FF	qq:Preset Zoom Speed 01~07 default:5
CAM_Preset Speed Adj	Preset Speed Adj	8x 01 7E 01 1B 0p FF	p: Adjustment of direction 2=down 2=up
CAM_IR address	IR address	8x 01 06 D8 0p FF	p:IR address 1~4
CAM_Gamma	Gamma set	8x 01 04 5B 0p FF	P:Gamma NO. (0~4)
CAM_2D Noise Reduction	Direct	8x 01 04 A5 0p FF	(0~0x01)
CAM_3D Noise Reduction	Direct	8x 01 04 53 0p FF	(0~0x05)
CAM_AT_OnOff	Direct	8x 01 04 C8 0p FF	P: 0 = off 1 = on
CAM_AT_TargetChange	Target change	8x 01 04 CA 0p FF	P:0x02 right move P:0x03 left move
CAM_TargetLocation	Target location	8x 01 04 CB 0p FF	P: 0:mid 1:left 2:right
CAM_TargetRatio	Target ratio	8x 01 04 CC 0p 0q FF	Pq:(6~20)Human is 1/p q
CAM_AT_ChangeTime	Direct	8x 01 04 CD 0p 0q FF	pq: t*10
CAM_AT_BlackBoardMode	Direct	8x 01 04 CE 0p FF	p: 1=Enable 0=Disable
CAM_AT_HilightTarget	Direct	8x 01 04 CF 0p FF	p: 1=Enable 0=Disable
CAM_AT_LeftUp_Limit (preset#251)	Direct	8x 01 04 3F 0p 0F 0B FF	p: 1=Set 2=Call 3=Clear
CAM_AT_RightDown_Limit(preset#253)	Direct	8x 01 04 3F 0p 0F 0D FF	p: 1=Set 2=Call 3=Clear
CAM_AT_InitialPosition (preset#255)	Direct	8x 01 04 3F 0p 0F 0F FF	p: 1=Set 2=Call 3=Clear
CAM_AT_BlackBoard Position(preset#252)	Direct	8x 01 04 3F 0p 0F 0C FF	p: 1=Set 2=Call 3=Clear
CAM_AT_ZoomLock	Direct	8x 01 04 D6 0p FF	p: 1=Enable 0=Disable



VISCA PROTOCOL



Command type	function	command	
CAM_AT_LimitEnable	Direct	8x 01 04 D7 0p FF	p: 1=Enable 0=Disable
CAM_AudioSet	Direct	8x 01 04 D8 0p 0q 0r 0s 0t 0u 0m 0n 0h 0i 0j FF	0p: 0x01-ON 0x00-OFF 0q: 0x01-line in rstu: samplerate mn: volume 0~100 h: encode mode 4: LPCM 5: ACC
FLICK	50HZ	8x 01 04 23 01 FF	
	60HZ	8x 01 04 23 02 FF	
	OFF	8x 01 04 23 00 FF	
Video System Set(Factory)	Direct	8x 01 06 35 00 pp FF	pp: Video format 1080P60 0x00 1080P50 0x01 1080I60 0x02 1080I50 0x03 1080P30 0x04 1080P25 0x05 720P60 0x06 720P50 0x07 720P30 0x08 720P25 0x09 1080P5994 0x0E 1080I5994 0x0F 1080P2997 0x10 720P5994 0x13 720P2997 0x14 1080P24 0x11 1080P2398 0x12 4K@30 0x15 4K@25 0x16 4K@60 0x17



VISCA PROTOCOL



Command type	function	command	
Video System Set(Sony)	Direct	81 01 04 24 72 0p 0q FF (HDMI) 81 01 04 24 73 0p 0q FF (SDI1/SFP+) 81 01 04 24 74 00 0m FF (Feature Size)	pq: Video format 1080P60 0x2e 1080P50 0x2f 1080I60 0x01 1080I50 0x04 1080P30 0x06 1080P25 0x08 720P60 0x09 720P50 0x0c 720P30 0x0e 720P25 0x11 1080P5994 0x13 1080I5994 0x02 1080P2997 0x07 720P5994 0x0a 720P2997 0x0f 1080P24 0x2a 1080P2398 0x2b 4K@30 0x1D 4K@25 0x1E 4K@60 0x1F 4K@50 0x20
SDIFeaturePositionCst	Direct	8x 01 06 33 0p FF	p= 0: USER 1: LEFT UP 2: LEFT MIDDLE 3: LEFT DOWN 4: CENTER UP 5: CENTER 6: CENTER DOWN 7: RIGHT UP 8: RIGHT MIDDLE 9: RIGHT DOWN
SDIFeaturePosition	Direct	8x 01 06 32 00 00 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs : (x position) mnxy: (y position)
CAM_ID Write		8x 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)
DHCP control	DHCP off	8x 01 04 AE 00 FF	DHCP off
	DHCP on	8x 01 04 AE 01 FF	DHCP on
IP address control	IP set	8x 01 04 AB 0p 0q 0r 0s 0m 0n 0x 0y FF	Set ip to: pq.rs.mn.xy



VISCA PROTOCOL



Command type	function	command	
	Mask set	8x 01 04 AC 0p 0q 0r 0s 0m 0n 0x 0y FF	Set mask to: pq.rs.mn.xy
	Gateway set	8x 01 04 AD 0p 0q 0r 0s 0m 0n 0x 0y FF	Set gateway to : pq.rs.mn.xy
Mainstream	resolution	8x 01 04 C2 00 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs : Column(x size) mnxy: Line (y size) only support: 1920*1080 1280*720 1024*576
	rate	8x 01 04 C2 01 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrsmnxy: bitrate (1024~61440kbps)
	Encode Mode	8x 01 04 C2 02 0p 0q FF	Mode sel: 0xpq 0x00: h264 0x01: h265
	Frame Rate	8x 01 04 C2 03 0p 0q FF	Frame rate: 0xpq (15~60)
	IDR	8x 01 04 C2 04 0p 0q FF	IDR Setting: 0xpq (1~120)
	Stream Rate Mode	8x 01 04 C2 05 0p 0q FF	Contor mode: 0xpq 0x00: CBR 0x01: VBR
Sub stream	resolution	8x 01 04 C3 00 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs : Column(x size) mnxy: Line (y size) only support: 640*360
	rate	8x 01 04 C3 01 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrsmnxy: bitrate (1024~20480kbps)
	Encode Mode	8x 01 04 C3 02 0p 0q FF	Mode sel: 0xpq 0x00: h264 0x01: h265
	Frame Rate	8x 01 04 C3 03 0p 0q FF	Frame rate: 0xpq (15~60)
	IDR	8x 01 04 C3 04 0p 0q FF	IDR Setting: 0xpq (1~120)
	Stream Rate Mode	8x 01 04 C3 05 0p 0q FF	Contor mode: 0xpq 0x00: CBR 0x01: VBR
SYS_Menu	Menu On	8x 01 06 06 02 FF	Turn on the menu
	Menu Off	8x 01 06 06 03 FF	Turn off the menu
	Menu Back	8x 01 06 06 10 FF	Menu step back
	Menu OK	8x 01 7E 01 02 00 01 FF	Menu ok
IR_Receive	On	8x 01 06 08 02 FF	IR(remote



VISCA PROTOCOL



Command type	function	command	
	Off	8x 01 06 08 03 FF	commander)receive ON/OFF
	On/Off	8x 01 06 08 10 FF	
Tally control	Tally on/off	8x 01 7E 01 0A 00 0p FF	1: (LED red on) 2: (LED red on) 3: (LED green on) 0: (LED off)
Tally Brightness	Direct	8x 01 7E 01 0A 01 0p FF	p: 0: OFF 1: low 2:middle 3:high
Pan_tilt Drive	Up	8x 01 06 01 VV WW 03 01	VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low speed) to 0x14 (high speed) YYYY: Pan Position(TBD) ZZZZ: Tilt Position(TBD)
	Down	8x 01 06 01 VV WW 03 02	
	Left	8x 01 06 01 VV WW 01 03	
	Right	8x 01 06 01 VV WW 02 03	
	Up left	8x 01 06 01 VV WW 01 01	
	Up right	8x 01 06 01 VV WW 02 01	
	Down Left	8x 01 06 01 VV WW 01 02	
	Down Right	8x 01 06 01 VV WW 02 02	
	Stop	8x 01 06 01 VV WW 03 03	
	Absolute Position	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Relative Position	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan-tilt Limit Set	Set	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1: Up Right 0: Down Left YYYY: Pan Limit Position(TBD) ZZZZ: Tilt Limit
	Clear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	
CAM_GL_Vertical	Direct	8x 01 04 3E 0p 0q 0r 0s FF	pqrs: -200~200 int16
CAM_GL_Phase	Direct	8x 01 04 3B 0p 0q 0r 0s FF	pqrs: -206~49
CAM_GL_PhaseStep	Direct	8x 01 04 3C 0p FF	p: 1~10
CAM_Phantom_power_Set	Direct	8x 01 04 D9 0p FF	p : 2=Enable 3=Disable
CAM_SystemMode_Set	Direct	8x 01 06 34 0p FF	p: 0=FULL NDI priority 1=Digital priority



Part3 Camera Inquiry Command

Command type	command	return	note
CAM_Power Inq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off(Standby)
CAM_Zoom Pos Inq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_DZoom On Off Inq	8x 09 04 06 FF	y0 50 0p FF	p: 2: ON 3: OFF
CAM_PT Speed Inq(IR)	8x 09 04 C1 FF	y0 50 pp FF	pp: 0x05~0x18
CAM_Zoom Speed Inq(IR)	8x 09 04 D1 FF	y0 50 0p FF	p:0x00~0x07
CAM_Focus Mode Inq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_Focus Pos Inq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_2D_Inq	8x 09 04 A5 FF	y0 50 03 FF	(0~0x01) p: 0: off 1: on
CAM_3D_Inq	8x 09 04 53 FF	y0 50 03 FF	(0~0x05) p:0:off 1: auto 2~5: noise level
CAM_WB Mode Inq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	Indoor mode
		y0 50 02 FF	Outdoor mode
		y0 50 03 FF	OnePush mode
		y0 50 04 FF	ATW
		y0 50 05 FF	Manual
CAM_RGain Inq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGain Inq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_Saturation Inq	8x 09 04 A1 FF	y0 50 00 00 0p 0q FF	pq: saturation
CAM_Contrast Inq	8x 09 04 A2 FF	y0 50 00 00 0p 0q FF	pq: contrast
CAM_AE Mode Inq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter priority
		y0 50 0B FF	Iris priority
		y0 50 0D FF	Bright
CAM_Flicker Mode Inq	8x 09 04 AA FF	y0 50 0p FF	p: 0: OFF 1: 50HZ 2: 60HZ



VISCA PROTOCOL



Command type	command	return	note
CAM_Shutter Pos Inq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pp: Shutter Position
CAM_Iris Pos Inq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pp: Iris Position
CAM_Gain Posi Inq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pp: Gain Position
CAM_Bright Posi Inq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pp: Bright Position
CAM_WDR Mode Inq	8x 09 04 3D FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NDFilter_Inq	8x 09 04 DA FF	y0 50 04 01 FF	100%
		y0 50 04 02 FF	25%
		y0 50 04 03 FF	6.3%
		y0 50 04 04 FF	1.6%
CAM_Pre PT Speed Inq	8x 09 7E 01 0B FF	y0 50 pp FF	pp: 0x05~0x18
CAM_Pre Zoom Speed Inq	8x 09 7E 01 2B FF	y0 50 pp FF	pp: 0x01~0x07
SYS_Menu Mode Inq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_LR_Reverse Inq	8x 09 04 61 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_Picture Flip Inq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ID Inq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID
CAM_DHCP Inq	8x 09 04 AE FF	y0 50 pp FF	
CAM_IP Inq	8x 09 04 AB FF	y0 50 0p 0p 0q 0q 0r 0r 0s 0s FF	
CAM_MASK Inq	8x 09 04 AC FF	y0 50 0p 0p 0q 0q 0r 0r 0s 0s FF	
CAM_GATEWAY Inq	8x 09 04 AD FF	y0 50 0p 0p 0q 0q 0r 0r 0s 0s FF	
CAM_Version Inq	8x 09 00 02 FF	y0 50 ab cd mn pq rs tu vw FF	



VISCA PROTOCOL



Command type	command	return	note
Tally Inq	8x 09 7E 01 0A 00 FF	y0 50 0p FF	p: tally state
Tally Brightness Inq	8x 09 7E 01 0A 01 FF	y0 50 0p FF	p: tally brightness
Freeze Inq	8x 09 04 75 FF	y0 50 0p FF	p: Freeze switch 3 = OFF 2 = ON
Preset Freeze Inq	8x 09 04 76 FF	y0 50 0p FF	p: Preset Freeze switch 3 = OFF 2 = ON
PresetExist Inq	8x 09 04 3F 0p 0p FF	y0 50 0q FF	pp: preset NO. 0~255 q: 0:not saved 1:saved
Preset Speed Set Inq	8x 09 7E 01 0B FF	y0 50 pp FF	pp: Preset Speed 2~24 default:15
CAM_Inq_AT_OnOff	8x 09 04 C8 FF	y0 50 0p FF	P: 0 = off 1 = on
CAM_Inq_AT_TargetChange	8x 09 04 CA FF	y0 50 0p FF	P:0x02 right move P:0x03 left move
CAM_Inq_TargetLocation	8x 09 04 CB FF	y0 50 0p FF	P: 0:mid 1:left 2:right
CAM_Inq_TargetRatio	8x 09 04 CC FF	y0 50 0p 0q FF	Pq:(6~20)Human is 1/pq
CAM_AT_ChangeTime_Inq	8x 09 04 CD FF	y0 50 0p 0q FF	Pq: t*10
CAM_AT_BlackBoardMode_Inq	8x 09 04 CE FF	y0 50 0p FF	p: 1=Enable 0=Disable
CAM_AT_HilighTarget_Inq	8x 09 04 CF FF	y0 50 0p FF	p: 1=Enable 0=Disable
CAM_AT_ZoomLock_Inq	8x 09 04 D6 FF	y0 50 0p FF	p: 1=Enable 0=Disable
CAM_AT_LimitEnable_Inq	8x 09 04 D7 FF	y0 50 0p FF	p: 1=Enable 0=Disable
CAM_AudioInq	8x 09 04 D8 FF	y0 50 0p 0q 0r 0s 0t 0u 0m 0n 0h 0i 0j FF	Op: 0x01-ON 0x00-OFF Oq: 0x01-line in rstu: samplerate mn: volume 0~100 h: encode mode 4: LPCM 5: ACC



VISCA PROTOCOL



Command type	command	return	note
Video System Inq(Factory)	8x 09 06 23 FF	y0 50 pp FF	pp: Video format
Video System Inq(Sony)	8x 09 04 24 72 FF(HDMI) 8x 09 04 24 73 FF(SDI1/SFP+) 8x 09 04 24 74 FF(SDI2)	y0 50 0p 0p FF	pp: Video format
SDIFeaturePositionInq	8x 09 06 32 FF	y0 50 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs:(x position) mnxy:(y position)
SDIFeaturePositionCstInq	8x 09 06 33 FF	y0 50 0p FF	p= position
IR_Transfer	8x 09 06 1A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
IR_Receive	8x 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
Pan-tilt Max Speed Inq	8x 09 06 11 FF	y0 50 ww zz FF	ww: Pan Max Speed zz: Tilt Max Speed
Pan-tilt Pos Inq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www: Pan Position zzzz: Tilt Position
Mainstream Resolution Inq	8x 09 04 C2 00 FF	y0 50 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs : Column(x size) mnxy: Line (y size) only support: 1920*1080 1280*720 1024*576
Main stream Rate Inq	8x 09 04 C2 01 FF	y0 50 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrsmnxy: bitrate (1024~61440kbps)
Main Encode Mode Inq	8x 09 04 C2 02 FF	y0 50 pp FF	Mode sel:0xpp 0x00: h264 0x01: h265
Main Frame Rate Inq	8x 09 04 C2 03 FF	y0 50 pp FF	Frame rate:0xpp (15~60)
Main IDR Inq	8x 09 04 C2 04 FF	y0 50 pp FF	IDR Setting:0xpp (1~120)
Main Stream Rate Mode Inq	8x 09 04 C2 05 FF	y0 50 pp FF	Contor mode:0xpp 0x00: CBR 0x01: VBR



VISCA PROTOCOL



Command type	command	return	note
Sub stream Resolution Inq	8x 09 04 C3 00 FF	y0 50 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrs : Column(x size) mnxy: Line (y size) only support: 640*360
Sub stream Rate Inq	8x 09 04 C3 01 FF	y0 50 0p 0q 0r 0s 0m 0n 0x 0y FF	pqrsmnxy: bitrate (1024~20480kbps)
Sub Encode Mode Inq	8x 09 04 C3 02 FF	y0 50 pp FF	Mode sel:0xpp 0x00: h264 0x01: h265
Sub Frame Rate Inq	8x 09 04 C3 03 FF	y0 50 pp FF	Frame rate:0xpp (15~60)
Sub IDR Inq	8x 09 04 C3 04 FF	y0 50 pp FF	IDR Setting:0xpp (1~120)
Sub Stream Rate Mode Inq	8x 09 04 C3 05 FF	y0 50 pp FF	Contor mode:0xpp 0x00: CBR 0x01: VBR
CAM_GL_Vertical	8x 09 04 3E FF	y0 50 0p 0q 0r 0s FF	pqrs: -200~200
CAM_GL_Phase	8x 09 04 3B FF	y0 50 0p 0q 0r 0s FF	pqrs: -206~49
CAM_GL_PhaseStep	8x 09 04 3C FF	y0 50 0p FF	p: 1~10
CAM_SystemMode_Inq	8x 09 06 34 FF	y0 50 0p FF	p: 0=FULL NDI priority
CAM_Phantom_power_In	8x 09 04 D9 FF	y0 50 0p FF	p: 2=Enable 3=Disable
CAM_NDFilter_Inq	8x 09 04 d9 FF	y0 50 0p FF	p:(0~3) 0:off 1:ND4 2:ND16 3:ND64
CAM_IRCutterMode_Inq	8x 09 04 01 FF	y0 50 0p FF	p: 2=Day Mode 3=Night Mode
CAM_TrackingMode_Inq	8x 09 04 C8 01 FF	y0 50 0p FF	p: 0=Only Tracking 1=Head Framing 2=Body

VISCA PAN TILT ABSOLUTE POSITION VALUE

PAN ANGLE	VISCA value	TILT ANGLE	VISCA value
-170	0xF670	-30	0xFE50
-135	0xF868	0	0x0000
-90	0xFAF0	30	0x01B0
-45	0xFD78	60	0x0360



VISCA PROTOCOL



0	0x0000	90	0x510
45	0x0288		
90	0x0510		
135	0x0798		
170	0x0990		

VISCA PAN TILT SPEED VALUE

Pan(Degree/Second)		Tilt(Degree/Second)	
0	0.0	0	0.0
1	0.1	1	0.1
2	0.3	2	0.3
3	0.6	3	0.6
4	1.2	4	1.2
5	2.4	5	2.4
6	4.8	6	4.8
7	8.5	7	7.6
8	10	8	10
9	12	9	12
10	15	10	15
11	18	11	18
12	21	12	21
13	24	13	24
14	27	14	26
15	31	15	29
16	35	16	33
17	40	17	35
18	45	18	38
19	50	19	41
20	55	20	44
21	59	21	48
22	63	22	52
23	66	23	56
24	70	24	60

===== PELCO-D PROTOCOL =====

Function	Byte	Byte2	Byte3	Byte4	Byte5	Byte6	Byte
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Up left	0xFF	Address	0x00	0x0C	Pan Speed	Tilt Speed	SUM
Up right	0xFF	Address	0x00	0x0A	Pan Speed	Tilt Speed	SUM
Down Left	0xFF	Address	0x00	0x14	Pan Speed	Tilt Speed	SUM
Down Right	0xFF	Address	0x00	0x12	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x01	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Stop	0xFF	Address	0x00	0x00	Pan Speed	Tilt Speed	SUM
Clear Preset	0Xff	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0Xff	Address	0x00	0x07	0x00	Preset ID	SUM
Query Pan Position	0Xff	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0Xff	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0Xff	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0Xff	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0Xff	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0Xff	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

===== PELCO-P PROTOCOL =====

Function	Byte	Byte2	Byte3	Byte	Byte5	Byte6	Byte	Byte
Up	0xA0	Address	0x00	0x08	Pan Speed	Tilt Speed	0xAF	XOR
Down	0xA0	Address	0x00	0x10	Pan Speed	Tilt Speed	0xAF	XOR
Left	0xA0	Address	0x00	0x04	Pan Speed	Tilt Speed	0xAF	XOR
Right	0xA0	Address	0x00	0x02	Pan Speed	Tilt Speed	0xAF	XOR
Up left	0xA0	Address	0x00	0x0C	Pan Speed	Tilt Speed	0xAF	XOR
Up right	0xA0	Address	0x00	0x0A	Pan Speed	Tilt Speed	0xAF	XOR
Down Left	0xA0	Address	0x00	0x14	Pan Speed	Tilt Speed	0xAF	XOR
Down Right	0xA0	Address	0x00	0x12	Pan Speed	Tilt Speed	0xAF	XOR
Zoom In	0xA0	Address	0x00	0x20	0x00	0x00	0xAF	XOR
Zoom Out	0xA0	Address	0x00	0x40	0x00	0x00	0xAF	XOR
Focus Far	0xA0	Address	0x00	0x80	0x00	0x00	0xAF	XOR
Focus Near	0xA0	Address	0x01	0x00	0x00	0x00	0xAF	XOR
Stop	0xA0	Address	0x00	0x00	Pan Speed	Tilt Speed	0xAF	XOR
Set Preset	0xA0	Address	0x00	0x03	0x00	Preset ID	0xAF	XOR
Clear Preset	0xA0	Address	0x00	0x05	0x00	Preset ID	0xAF	XOR
Call Preset	0xA0	Address	0x00	0x07	0x00	Preset ID	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x51	0x00	0x00	0xAF	XOR
Query Pan Position Response	0xA0	Address	0x00	0x59	Value High Byte	Value Low Byte	0xAF	XOR
Query Tilt Position	0xA0	Address	0x00	0x53	0x00	0x00	0xAF	XOR
Query Tilt Position Response	0xA0	Address	0x00	0x5B	Value High Byte	Value Low Byte	0xAF	XOR

===== PELCO-P PROTOCOL =====

Query Zoom Position	0xA0	Address	0x00	0x55	0x00	0x00	0xAF	XOR
Query Zoom Position Response	0xA0	Address	0x00	0x5D	Value High Byte	Value Low Byte	0xAF	XOR

===== OSD MENU =====

1. Under working mode, press the MENU key on the IR remote controller, to enter the OSD menu as below:

MENU				
SYSTEM	PROTOCOL	<	VISCA	>
EXPOSURE	ADDRESS	<	1	>
IMAGE	BAUDRATE	<	9600	>
QUALITY	PROTOCOL LOCK	<	OFF	>
PTZ SETTINGS	RS485	<	ON	>
VIDEO	LANGUAGE	<	ENGLISH	>
IP SETTINGS	TALLY BRIGHTNESS	<	MIDDLE	>
TRACKING	PHANTOM POWER	<	OFF	>
RESET/INFO				
-1/1-				

2. After entering the main menu, use the navigate UP/DOWN key to select the main menu. Once selected, the main menu will change to the blue background, and the right side will show sub-menu options.
3. Press the navigate RIGHT key to enter the sub-menu; use the UP/DOWN key to select the sub-menu; use the LEFT/RIGHT key to select the parameter.
4. Press the MENU key again to return to the previous menu. Press the MENU key continuously to exit the OSD menu.



OSD MENU



5. OSD Menu Setting List

<i>SYSTEM</i>	PROTOCOL	Optional: VISCA, PLC.P, PLC.D	Default: VISCA
	ADDRESS	VISCA:: 1~7 PLC-P/D: 0~255	Default: 1
	BAUDRATE	Optional: 2400, 4800, 9600, 115200	Default: 9600
	PROTOCOL LOCK	Optional: OFF, ON	Default: OFF
	RS485	Optional: OFF, ON	Default: ON
	LANGUAGE	Optional: ZH-CH, ENGLISH, ZH-TW, RUSSIAN	Default: ENGLISH
	TALLY BRIGHTNESS	Optional: OFF, LOW, MIDDLE, HIGH	Default: HIGH
	PHANTOM POWER	Optional: OFF, ON	Default: OFF

<i>EXPOSURE</i>	EXPOSURE MODE	AUTO、MANUAL、SHUTTER、IRIS、BRIGHT	Default: AUTO
	SHUTTER	Shutter speed: 1/~1/10000, only valid under MANUAL and SHUTTER mode	Default: AUTO
	IRIS	Iris setting: CLOSE~F1.8, only valid under MANUAL and IRIS mode	Default: AUTO
	GAIN	Gain setting: 0dB~30dB, only valid under MANUAL mode	Default: AUTO
	EXPOSURE BRIGHT	Bright setting: 0~27, only valid under BRIGHT priority mode.	Default: AUTO
	BRIGHT	0~15	Default: 8
	WIDE DYNAMIC MODE	OFF/ON	Default: OFF
	WIDE DYNAMIC LEVEL	1~6	Default: 1
	ND Filter Level	100%、25%、6.3%、1.6%	Default: 100%
	Day/Night Mode	DAY/NIGHT	Default: Day
	BLC	OFF/ON	Default: OFF

<i>IMAGE</i>	WHITE BALANCE MODE	Optional: ATW, MANUAL, AUTO, INDOOR, OUTDOOR, PUSH, C.T.	Default: ATW
	RED GAIN	Red gain level: 0~255, only valid under manual white balance mode	Default: AUTO
	BLUE GAIN	Blue gain level:0~255 , only valid under manual white balance mode	Default: AUTO



OSD MENU



COLOR TEMPERATURE	Set the color temperature value: 2500~10000 only valid under C.T. mode	Default: AUTO
FLICKER	Anti-Flicker setting:50/60HZ/OFF, to reduce the video flicker	Default: 50HZ
DIGITAL ZOOM	OFF/ON	Default: OFF
FOCUS MODE	AUTO, MANUAL	Default: AUTO
FOCUS NEAR LIMIT	Optional: 1.5M、2M、3M、6M、10M	Default: 1.5M

QUALITY

2D NOISE REDUCTION

2D noise reduction: the bigger value is, the less noise on image is, the lower

Default: OFF

3D NOISE REDUCTION	3D noise reduction: OFF/AUTO/0~4, the bigger value is, the less motion noise on image is. High value will cause image	Default: AUTO
SHARPNESS	Sharpness setting: 0~15, the higher value is, edge of the image will be sharpened	Default: 6
CONTRAST	Set contrast level: 0~15	Default: 8
SATURATION	Set saturation level: 0~15	Default: 8
GAMMA	Select gamma level: 0~15	Default: 8
IMAGE STYLE	USER, NORMAL, COLORFULL	Default: USER
FOCUS SENSITIVITY	HIGH, NORMAL, LOW	Default: NORMAL

PTZ SETTINGS

SPEED BY ZOOM

Optional: OFF, ON

Default: ON

FLIP	Flip horizontal	Default: OFF
MIRROR	Flip vertical	Default: OFF
PT SPEED	Set Pan Tilt speed: 5~24	Default: 18
ZOOM SPEED	Set Zoom speed: 1~7	Default: 5
PRESET FREEZE	Optional: OFF, ON	Default: OFF
PRESET PT SPEED	Preset head speed:2~24	Default: 18
PRESET ZOOM SPEED	Preset zoom speed:1~7	Default: 5
PRESET SAVE AE&AW	Optional: OFF, ON	Default: OFF

VIDEO FORMAT

HDMI

2160P,1080P, 1080I, 720P

HDMI FRAME RARE	60, 59.94, 50, 30, 29.97, 25, 24, 23.98	
-----------------	---	--



OSD MENU



HDMI COLOR SPACE	RGB, YUV422, YUV444	Default: RGB
SDI	LEVELA, LEVEL B	
VIDEO FRAME RATE	60 25 30 50	DEFAULT:60

IP SETTINGS

DHCP

OFF/ON

IP	192.168.001.188 (Example)
MASK	255.255.255.000 (Example)
GATEWAY	192.168.001.001 (Example)
DNS	192.168.001.001 (Example)

TRACKING

AUTO TRACKING

ON/OFF

TARGET LOCATION	LEFT/MIDDLE/RIGHT
TARGET SCALING	BODY,1/6,1/8,1/10,1/12,1/16,1/20
LOST TIMEOUT(S)	0.5~10S
PT LIMIT ENABLE	ON/OFF
BLACK BOARD AREA DET	ON/OFF
FREE-D SERIAL ID	0~255
FREE-D SERIAL ENABLE	ON/OFF

RESET/INFO

SYSTEM RESET

Reset communication parameter to default

CAMERA RESET	Reset image parameter to default
PAN TILI RESET	Reset pan/tilt parameter to default
ALL RESET	Reset all parameter to default
MODEL NO.	Model number
ARM VERSION	ARM firmware version
RELEASE DATE	Software release date



OSD MENU



Set IP Address in Menu

In order to help customers debug, the camera has the support menu to set the IP address. The specific methods are as follows.

1. Press "MENU" to open the menu interface, and select "IP SETTINGS" in the menu to call up the IP setting interface.

MENU				
SYSTEM	DHCP	:	< OFF >	
EXPOSURE	MAIN IP	:	192.168.008.165	
IMAGE	MASK	:	255.255.255.000	
QUALITY	GATEWAY	:	192.168.008.001	
PTZ SETTINGS	DNS	:	192.168.008.001	
VIDEO				
IP SETTINGS				
TRACKING				
RESET/INFO				
				-1/1-

2. Press the right navigation button to enter the IP setting interface, and select the parameters needed by using the navigation up and down buttons, and then select the IP address, mask, gateway.
3. Short-press the number button to set the corresponding parameters. After setting the parameter, press the "MENU" button again to complete the current parameter setting.
4. To exit the menu, just press the "MENU" button again.

===== UVC CONTROL =====

1. Only run the client's software after the camera has completed self-configuration (the IR indicator in blue color and will not flash); otherwise may cause black screen issue.
2. Make sure the camera is recognized by the PC Device Manager.
3. Make sure the interval of video format switching more than 1 seconds, otherwise black video maybe caused.
4. Make sure the interval of control command sending from the server (via USB) to the camera no less than 250ms.
5. Support standard UVC interface.

UVC properties	VISCA
PU_BACKLIGHT_COMPENSATION_CONTROL	8x 01 04 33 02 FF
CY_FX_UVC_PU_BRIGHTNESS_CONTROL	8x 01 04 A4 00 00 0p 0q FF
CY_FX_UVC_PU_CONTRAST_CONTROL	8x 01 04 A2 00 00 0p 0q FF
CY_FX_UVC_PU_SATURATION_CONTROL	8x 01 04 A1 00 00 0p 0q FF
CY_FX_UVC_PU_SHARPNESS_CONTROL	8x 01 04 42 00 00 0p 0q FF
CY_FX_UVC_PU_GAMMA_CONTROL	8x 01 04 5B 0p FF
CY_FX_UVC_PU_WHITE_BALANCE_TEMPERATURE_CONTROL	8x 01 04 35 0p FF
CY_FX_UVC_PU_BACKLIGHT_COMPENSATION_CONTROL	8x 01 04 33 0p FF
CY_FX_UVC_PU_GAIN_CONTROL	8x 01 04 49 00 00 0p 0q FF
CY_FX_UVC_PU_POWER_LINE_FREQUENCY_CONTROL	8x 01 04 AA 0p FF
PU_GAIN_CONTROL	8x 01 04 49 00 00 00 0p FF
CT_ZOOM_ABSOLUTE_CONTROL	8x 01 04 47 0p 0q 0r 0s FF
CT_PANTILT_ABSOLUTE_CONTROL	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z FF
CT_PANTILT_RELATIVE_CONTROL	8x 01 06 01 pp qq rr ss FF
CT_ZOOM_RELATIVE_CONTROL	8x 01 04 07 pp FF

== WEB INTERFACE ==

1. Login

Run browser, input IP address(defaulted IP address is 192.168.1.188), to enter login interface. Users can select Language (Chinese, English, Korean, Portuguese or Spanish), input admin and password to login as following:

Default Username: admin

Default password: admin



2. PTZ Control




After successful login, the interface is shown in the above figure. The preview interface is displayed on the left, and the functions of camera pan tilt rotation, zoom, focus, and preset position settings can be controlled on the right. Additionally, parameters such as pan tilt and zoom speed can be set through the scroll bar.


== WEB INTERFACE ==

3. Camera Settings


Click on the "Camera Settings" option to enter the camera settings interface, as shown in the following figure:

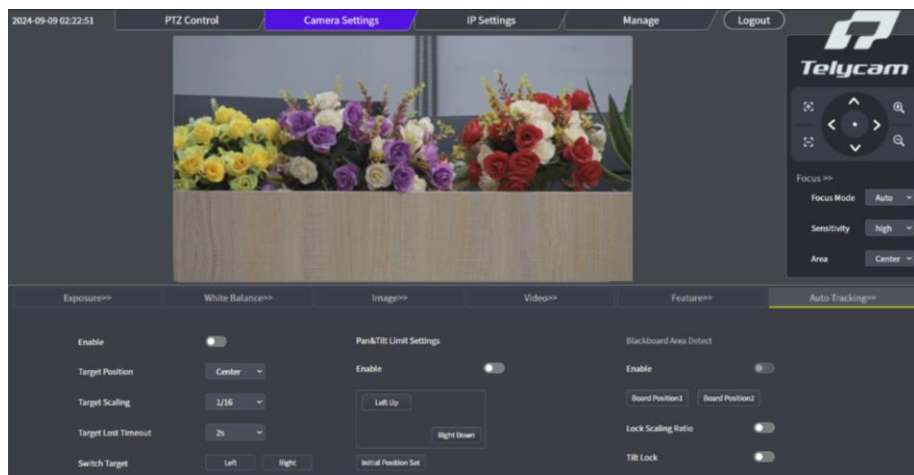

The "Exposure" option allows you to set exposure mode, anti-flicker, shutter, gain, iris, brightness, and other settings, as shown in the following figure:

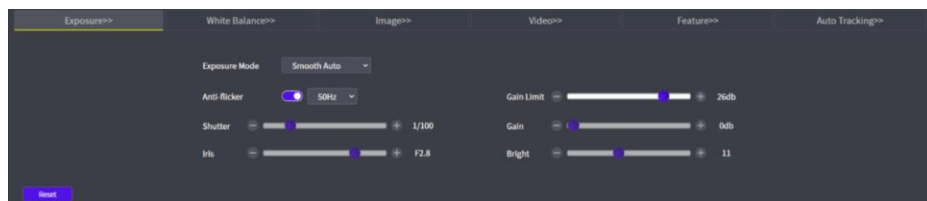

The "White Balance" option includes settings such as white balance mode, red gain, blue gain, and color temperature, as shown in the following figure:

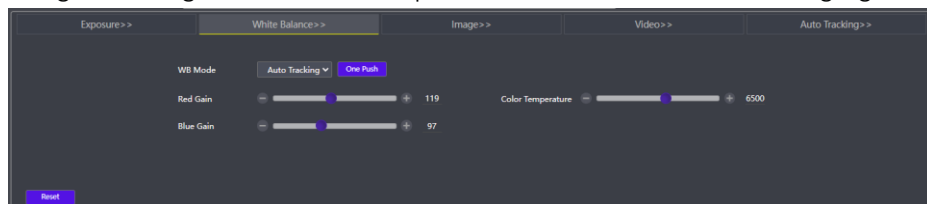


== WEB INTERFACE ==

The "Image" option includes settings such as saturation, contrast, sharpness, brightness, backlight compensation, wide dynamic, 2D noise reduction, 3D noise reduction, gamma, etc., as shown in the following figure:




The "Video" option includes settings such as output mode, VI frame rate, digital output, mirror, flip, and digital zoom, Genlock configure, as shown in the following figure:

*** VI Frame Rate Setting: The VI frame rate should match with the video output resolution frame rate to ensure smooth video across HDMI/SDI, IP, and USB.**

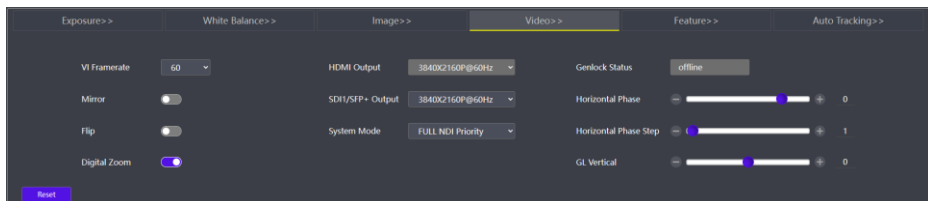


The "Auto Tracking" option includes settings such as tracking switch, target position, target scaling, target loss timeout, target switching, pan tilt limit setting, whiteboard setting, etc., as shown in the following figure:

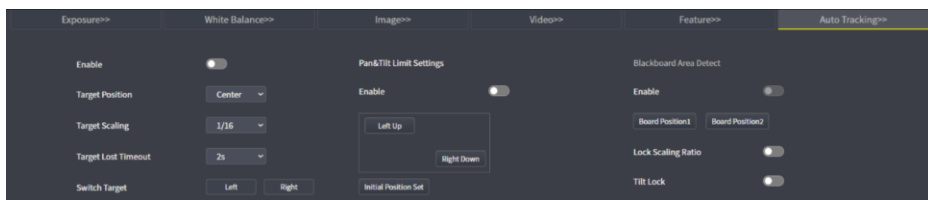


4. IP Settings

== WEB INTERFACE ==

Click on the "IP Settings" option to enter the camera IP settings interface, as shown in the following figure:

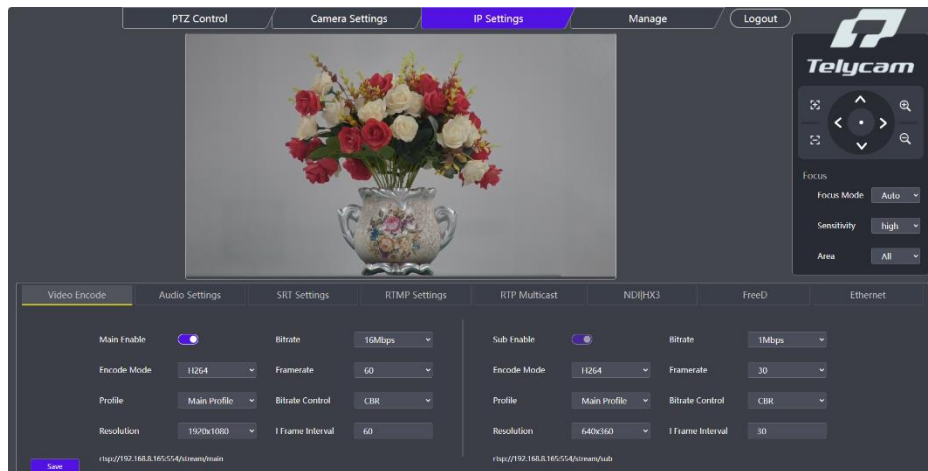

The "Video Encoding" option includes settings such as main and sub stream enable, encoding mode, profile, resolution, bit rate, frame rate, bit rate control, I frame interval, RTSP address, etc., as shown in the following figure:

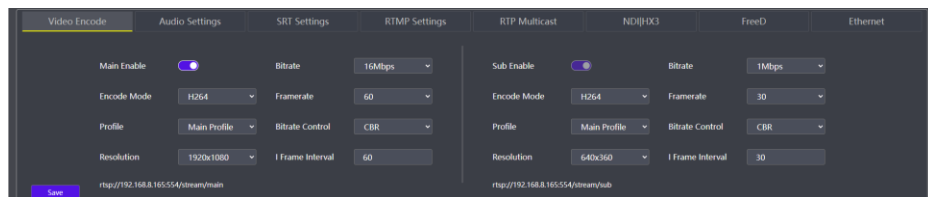

The "Audio Settings" option includes settings such as audio switch, encode mode, sample rate, bit rate, volume, etc., as shown in the following figure:

WEB INTERFACE

The screenshot shows the 'Audio Settings' tab selected. It contains the following controls:

- Audio State:** A toggle switch that is currently turned on.
- Phantom Power:** A toggle switch that is currently turned off.
- Encode Mode:** A dropdown menu set to 'AAC'.
- Volume:** A slider control set to 50.
- Sample Rate:** A dropdown menu set to '48k'.
- Bitrate:** A dropdown menu set to '96kpbs'.
- Input:** A dropdown menu set to 'Line'.
- Save:** A purple button at the bottom left.

The "SRT Settings" option includes settings such as mode selection, enable switch, port, latency, encryption switch, etc., as shown in the following figure:

The screenshot shows the 'SRT Settings' tab selected. It contains the following controls:

- Mode:** A dropdown menu set to 'Listener'.
- Enable:** A toggle switch that is currently turned off.
- Port:** A text input field containing '1600'.
- Latency(ms):** A text input field containing '120'.
- Encryption:** A toggle switch that is currently turned off.
- Key Length:** A dropdown menu set to '16(AES-128)'.
- Passphrase:** A text input field.
- Main Stream:** A text input field containing 'srt://192.168.8.165:1600?streamid=0'.
- Sub Stream:** A text input field containing 'srt://192.168.8.165:1600?streamid=1'.
- Save:** A purple button at the bottom left.

The "RTMP Settings" option includes enable switches and RTMP address settings, as shown in the following figure:

The screenshot shows the 'RTMP Settings' tab selected. It contains the following controls:

- Stream:** A dropdown menu set to 'Main'.
- Enable:** A toggle switch that is currently turned off, with a red 'error' message next to it.
- RTMP Address:** A text input field.
- Sub:** A dropdown menu set to 'Sub'.
- Enable:** A toggle switch that is currently turned off, with a red 'error' message next to it.
- RTMP Address:** A text input field.
- Save:** A purple button at the bottom left.

The "RTP multicast" option includes settings such as enable switch, multicast IP, multicast port, RTSP address, RTP address, etc., as shown in the following figure:

The screenshot shows the 'RTP Multicast' tab selected. It contains the following controls:

- Main Enable:** A toggle switch that is currently turned off.
- Sub Enable:** A toggle switch that is currently turned off.
- Multicast IP:** A text input field containing '232.255.255.255'.
- Multicast Port:** A text input field containing '4000'.
- RTSP Address:** A text input field containing 'rtsp://192.168.8.165:8554/multicast/main'.
- RTP Address:** A text input field containing 'rtp://232.255.255.4000'.
- Multicast IP:** A text input field containing '232.255.255.255'.
- Multicast Port:** A text input field containing '4002'.
- RTSP Address:** A text input field containing 'rtsp://192.168.8.165:8554/multicast/sub'.
- RTP Address:** A text input field containing 'rtp://232.255.255.4002'.
- Save:** A purple button at the bottom left.

== WEB INTERFACE ==

The "NDIHX3" option(supported by Plug-In) includes settings such as NDI enable switch, HX3 switch, device name, channel name, multicast, etc., as shown in the following figure:

The screenshot shows the "NDIHX3" settings page. The tabs at the top are: Video Encode, Audio Settings, SRT Settings, RTMP Settings, RTP Multicast, NDIHX3 (selected), FreeD, and Ethernet. The settings include:

- Enable: ☒
- HX3: ☐
- Device Name: 4K UHD PTZ Video Camera
- Channel Name: HX Stream 192.168.8.165
- Multicast: ☐
- Multicast IP: 239.255.0.0
- Multicast Mask: 255.255.0.0
- Multicast TTL: 1
- Group: Public
- Discovery: ☐

A "Save" button is located at the bottom left.

The "FreeD" option includes settings such as enable switch, camera ID, mode, IP address, port, interval, etc., as shown in the following figure:

The screenshot shows the "FreeD" settings page. The tabs at the top are: Video Encode, Audio Settings, SRT Settings, RTMP Settings, RTP Multicast, NDIHX3, FreeD (selected), and Ethernet. The settings include:

- Enable: ☐
- Camera ID: 0
- Mode: Always (dropdown menu)
- Frequency: 0
- Client 1: ☐ IP Address: 127.0.0.1 Port: 1025
- Client 2: ☐ IP Address: 127.0.0.1 Port: 1025
- Client 3: ☐ IP Address: 127.0.0.1 Port: 1025
- Client 4: ☐ IP Address: 127.0.0.1 Port: 1025

A "Save" button is located at the bottom left.

The "Ethernet" option includes parameters such as automatic allocation switch, IP address, net mask, gateway, HTTP port, RTSP port, Visca over IP port, RTSP encryption, etc., as shown in the following figure:

The screenshot shows the "Ethernet" settings page. The tabs at the top are: Video Encode, Audio Settings, SRT Settings, RTMP Settings, RTP Multicast, NDIHX3, FreeD, and Ethernet (selected). The settings include:


- DHCP: ☐
- Auto Renew Lease: ☐
- RTSP Encrypt: ☐
- SSDP: ☒
- IP Address: 192.168.8.165
- Netmask: 255.255.255.0
- Gateway: 192.168.8.1
- DNS: 192.168.8.1
- HTTP Port: 80
- Visca Over IP: 52381
- ONVIF Port: 8000
- RTSP Port: 554

A "Save" button is located at the bottom left.


== WEB INTERFACE ==

5. Manage

Click on the "Manage" option to enter the camera management interface, as shown in the following figure:

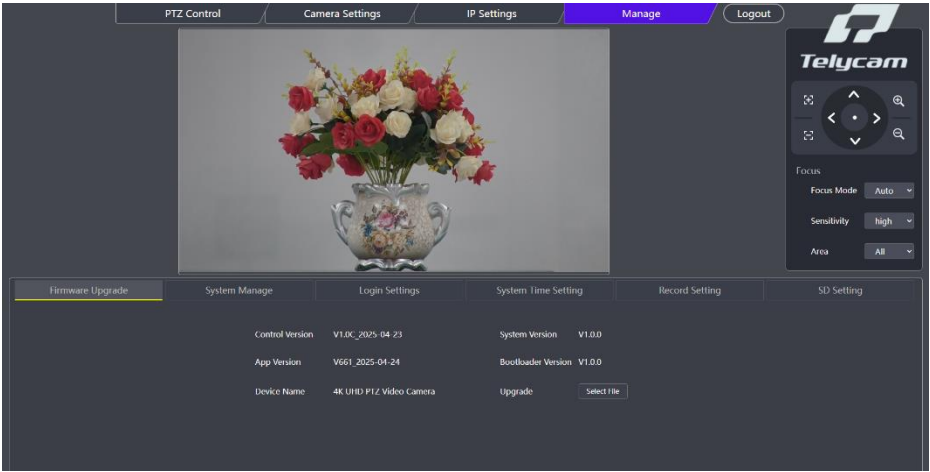


The "Firmware Upgrade" option allows you to view the device name, camera software and hardware version number, and upgrade the camera program through the "Select File" column, as shown in the following figure:

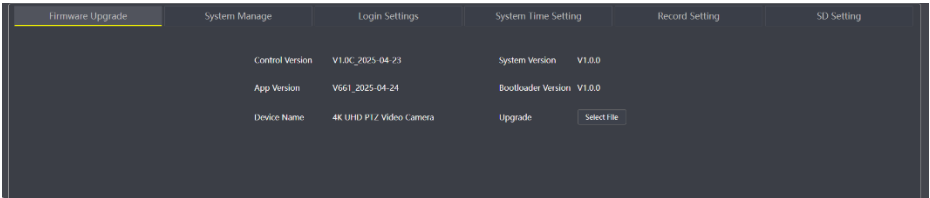


The "System Manage" option includes settings such as reset, reset/reboot, reboot, and parameter batch configuration. Also you can schedule your camera's reboot time as shown in the following figure:


== WEB INTERFACE ==

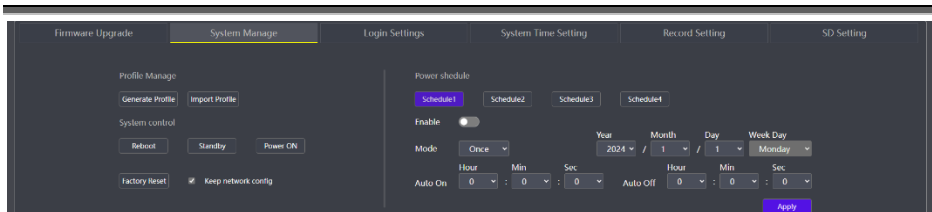


The "Login Settings" option allows you to set the login account and password for the camera:

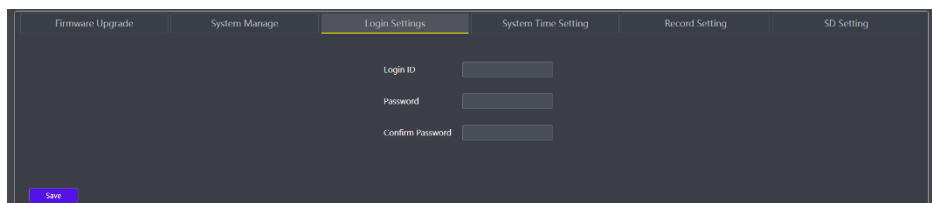

The "System Time Settings" option includes settings for NTP activation, time zone, update interval, NTP server address, and port, as shown in the following figure:


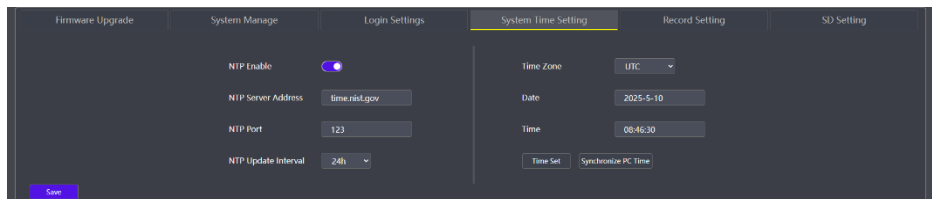


The "Record Settings" option offers customizable parameters for recording, including Record enable, Record stream, File size, Loop record, and Frequency as shown in the following figure:

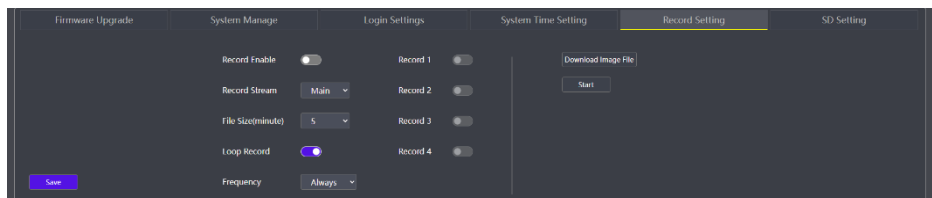

== WEB INTERFACE ==

The "SD Settings" option enables you to manage SD cards and perform formatting operations.

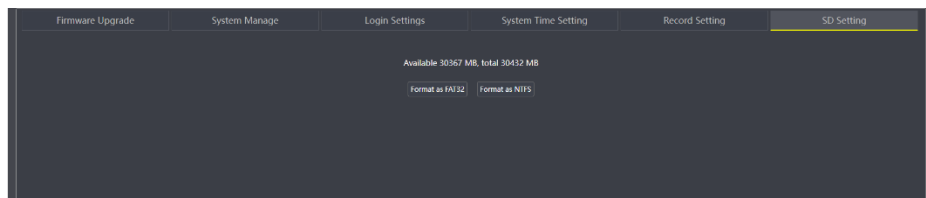

6. **Logout** (Click "Logout" to return to the login interface.)

== WEB INTERFACE ==

Default RTSP main streaming address:

rtsp://192.168.1.188/stream/main

Default RTSP sub streaming address:

rtsp://192.168.1.188/stream/sub

Default RTMP main streaming address:

rtmp://192.168.1.188:1935/app/rtmpstream0

Default RTMP sub streaming address:

rtmp://192.168.1.188:1935/app/rtmpstream1

1. Run VLC Media Player.
2. Media->network stream, to enter into “open media” interface.
3. Input RTSP address in URL as following:



4. Click play to view the real time image.

Note: If there is much image lag, select “more option” to enter into following setting, change buffer time smaller (VLC default buffer time is 1000ms).





NDI Tools Guide



1. Image Preview

A. Download the NDI Tools via <https://ndi.tv/tools/> and install it.

B. Find out the NDI 5 Tools/Studio Monitor via Windows toolbars, and then open it, as bellow:



C. Right click on the Studio Monitor screen, select the preview device:



2. Pan Tilt Control



Refer to above picture, once open the video via Studio Monitor, it will show up the control panel on the right side, to control camera pan, tilt, zoom, focus, preset, focus.



NDI Tools Guide



3. Run WEB via Studio Monitor




Refer to above picture, once open the video via Studio Monitor, there will show up a setting icon at the lower right corner, single click this icon to enter WEB UI.

4. How to use NDI tools to Virtual Input CAMERA

A. Find out the NDI Tools/Virtual Input via Windows toolbars, open it, then it will show up the NDI Virtual Input icon at the Windows toolbars, as bellow picture shows:



B.Right click on the NDI Virtual Input icon, to select the virtual device name:

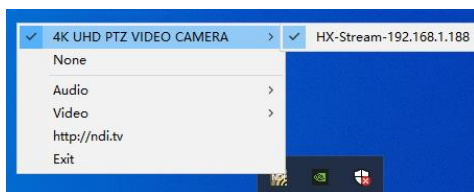


C. Take Zoom for example, select NDI Video as video camera, as bellow picture shows:

This also work for other applications, such as GotoMeeting,Skype for Business, Hangouts.



NDI Tools Guide

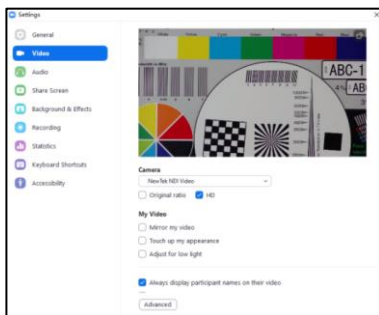


===== VISCA over IP =====

VISCA over IP:

VISCA over IP means VISCA protocol transmit via IP, to reduce RS232/RS485 cable layout (the controller must support IP communication function)

Communication port spec:

- Control port: RJ45 Gigabit LAN
- IP protocol: IPv4
- Transmit protocol: UDP
- IP address: set via web end or OSD menu
- Port address: 52381
- Confirm send/transmission control: depend on applied program
- Applied range: in the same segment, not suitable for bridge network
- Turn on camera: In the menu, set VISCA option to OVER IP or OVER ALL

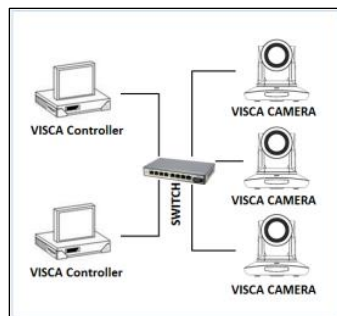

IP Networking method

How to use VISCA over IP

VISCA Command

It means commands from controller to peripheral equipment, when peripheral equipment receives commands, then return ACK. When commands executed, will return complete message.

For different commands, camera will return different message.

VISCA Inquiry


It means inquiry from controller to peripheral equipment when peripheral equipment receives this kind of commands, it will return required message.

VISCA Reply

It means ACK, complete message, reply or error reply, it is sent from peripheral equipment to controller.

===== VISCA over IP =====

Command format: the following is message head and valid message format.

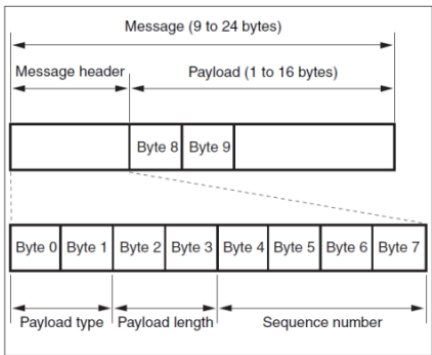

Note: LAN output way is big-endian, LSB is in the front.

Payload type:

Data definition as following:

Name	Value (Byte 0)	Value (Byte1)	Value
VISCA command	0x01	0x00	Stores the VISCA command.
VISCA inquiry	0x01	0x10	Stores the VISCA inquiry.
VISCA reply	0x01	0x11	Stores the reply for the VISCA command and VISCA inquiry, or VISCA device setting command.
VISCA device setting command	0x01	0x20	Stores the VISCA device setting command.
Control command	0x02	0x00	Stores the control command.
Control reply	0x02	0x01	Stores the reply for the control command.

Payload length

Valid data length in Payload (1~16), is command length.

For example, when valid data length is 16 byte

Byte 2 : 0x00

===== VISCA over IP =====

Byte 3 : 0x10

Controller will save sequence number of each command, when one command sent, the sequence number of the command will add 1, when the sequence number becomes the max value, it will change to 0 for next time. The peripheral equipment will save sequence number of each command, and return the sequence number to the controller.

Payload

According to Payload type, the following data will be saved.

- VISCA command
Save VISCA command packet
- VISCA inquiry
Save VISCA message packet
- VISCA reply
Save VISCA return packet
- VISCA device setting command
Save VISCA equipment setting command packet.
- Control command

The following data is saved in control command payload

Name	Value	Description
RESET	0x01	Resets the sequence number to 0. The value that was set as the sequence number is ignored.
ERROR	0x0Fyy	yy=01:Abnormality in the sequence number.
		yy=02:Abnormality in the message(message type).

- Controlled reply
The following data is saved in return command payload of control command.

Message	Value	Description
---------	-------	-------------

===== VISCA over IP =====

ACK	0x01	Reply for RESET.
-----	------	------------------

Delivery confirmation

VISCA over IP uses UDP as transmission communication protocol, UDP communication message transmission is not stable, it is necessary to confirm delivery and resent in application.

Generally, when controller sends a command to peripheral equipment, controller will wait for the return message then send the next command, we can detect and confirm if the peripheral equipment receive the commands from return message's lag time. If controller shows it is overtime, it is regarded as error transmission.


If controller shows it is overtime, resend the commands to check peripheral's status, resent command sequence number is same as last command, the following chart list the received message and status after resending the commands.

Lost message	Received message for retransmission	Status after retransmission	Correspondence after retransmission
Command	ACK message	Command is performed by retransmission.	Continue processing.
Completion message For the command	ERROR(Abnormality in the sequence number.)	Command has been performed. If only the ACK message is lost, the completion message returns.	If the result by the completion message is needed, retransmit by updating the sequence number.
Completion message for the command	ERROR(Abnormality in the sequence number.)	Command has been performed.	If the result by the completion message is needed, retransmit by updating the sequence number.
Inquiry	Reply message	Inquiry is performed by retransmission.	Continue processing.
Reply message for the inquiry	ERROR(Abnormality in the sequence number.)	Inquiry has been performed.	If the result by the reply message is needed, retransmit by updating the sequence number.


===== VISCA over IP =====

Error message	Error message	Command is not performed. If the error cause eliminates, normal reply is return(ACK, reply message)	Eliminate the error cause. If normal reply returns, continue processing.
Inquiry of the VISCA device setting command	Reply message of the VISCA device setting command	Inquiry has been performed by retransmission.	Continue processing.
Reply message of the VISCA device setting command	ERROR(Abnormality in the sequence number.)	Inquiry has been performed.	If the result by the reply message is needed, retransmit by updating the sequence number.

Sequence chart as following

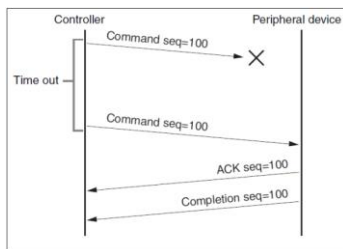

Sequence chart when command lost

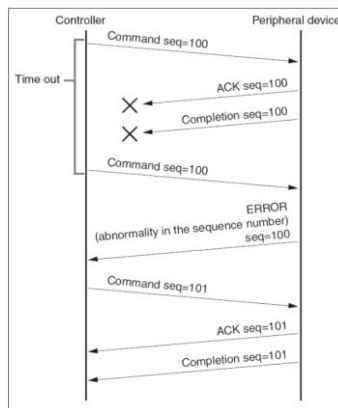

Sequence chart when returned message lost

Note: Do not set IP address, sub net mask, gateway parameter in VISCA over IP command, otherwise, it will cause network breaks off. Due to change these parameter, network will be in off status.

